

ALARM POSITIONING

Compact units and sirens
Control units and modules

- ⇒ On the fireproof bulkhead on the servo-brake
⇒ Under the driver's dashboard

WIRING LOCATION

- ⇒ Use the free harness next to the servo-brake.

EARTH CONNECTION

Positive and Negative

- ⇒ to the battery terminals.

FUNCTION AND MODALITY OF THE CONNECTION	VEHICLES WIRE COLOUR	WIRE POSITIONING
<u>DIRECTION INDICATOR LIGHTS:</u> 	GREEN-YELLOW ref. BROWN 1 mmsq GREEN-RED ref. BROWN 1 mmsq	<u>Connector:</u> 8-pin TRANSPARENT under the steering column.
<u>IGNITION LIVE</u> 	YELLOW ref. GREY 0,75 mmsq	<u>Connector:</u> 4-pin GREEN connected to the fuel pump relay fixed on a bracket on the fuse box.
<u>1° ENGINE IMMOBILISATION:</u> (starter motor)  Use A 30 Amp. Gemini 2352 relay.	BLUE-RED 4 mmsq	<u>Connector:</u> 6-pin BLACK under the steering column.
<u>2° ENGINE IMMOBILISATION:</u> (FUEL PUMP – PETROL VEHICLES) 	YELLOW ref. GREY 0,75 mmsq	<u>Connector:</u> 4-pin GREEN connected to the fuel pump relay fixed on a bracket on the fuse box.
<u>CENTRAL DOOR LOCKING:</u> diagram N. 5. Use a 2-wires Gemini 2305 motor.		
<u>ELECTRIC WINDOWS:</u> Use the Gemini 2244 module. 	<u>Front:</u> a. + ↑ L.h.s.: BLUE b. + ↑ R.h.s.: RED-BLACK ref. GREY <u>Rear:</u> c. + ↑ L.h.s.: GREEN-BLACK ref. GREY d. + ↑ R.h.s.: GREEN-WHITE ref. GREY All of 1 mmsq	a. Connected to the control switches inside the driver's door. b.c.d. <u>Connector:</u> 24-pin TRANSPARENT behind the driver's kick plate.
<u>DOOR AND BOOT PIN SWITCHES:</u> 	RED-WHITE ref. GREY 0,75 mmsq	<u>Connector:</u> 24-pin TRANSPARENT behind the driver's kick plate.
<u>BONNET PIN SWITCH:</u> Install the button supplied with the kit on the driver's light.		

VEHICLE KEY FOR RADIO KEY TRANSMITTER: Blade kit RK N. 14

NOTE: the voltage sensing circuit can be isolated

N.B. THE ABOVE MENTIONED INFORMATIONS ARE ONLY INDICATIVE. THE MANUFACTURER RESERVES THE RIGHTS TO EXECUTE MODIFICATION WITHOUT PRIOR NOTICE.