



FORESTER

INSTALLATION INSTRUCTION

GENUINE PARTS

FILTER KIT

1 Part No.


2 Applicable Model FORESTER

3 Component parts (Confirm component parts before you start installation.)

No.	Component parts	Q'ty	Remarks
1	Filter assembly	1	Front
2	Filter assembly	1	Rear
3	Label	1	Filter replacement
4	Label	1	Caution
5	Installation manual	1	


4 Tools • Screwdriver

5 Installation process

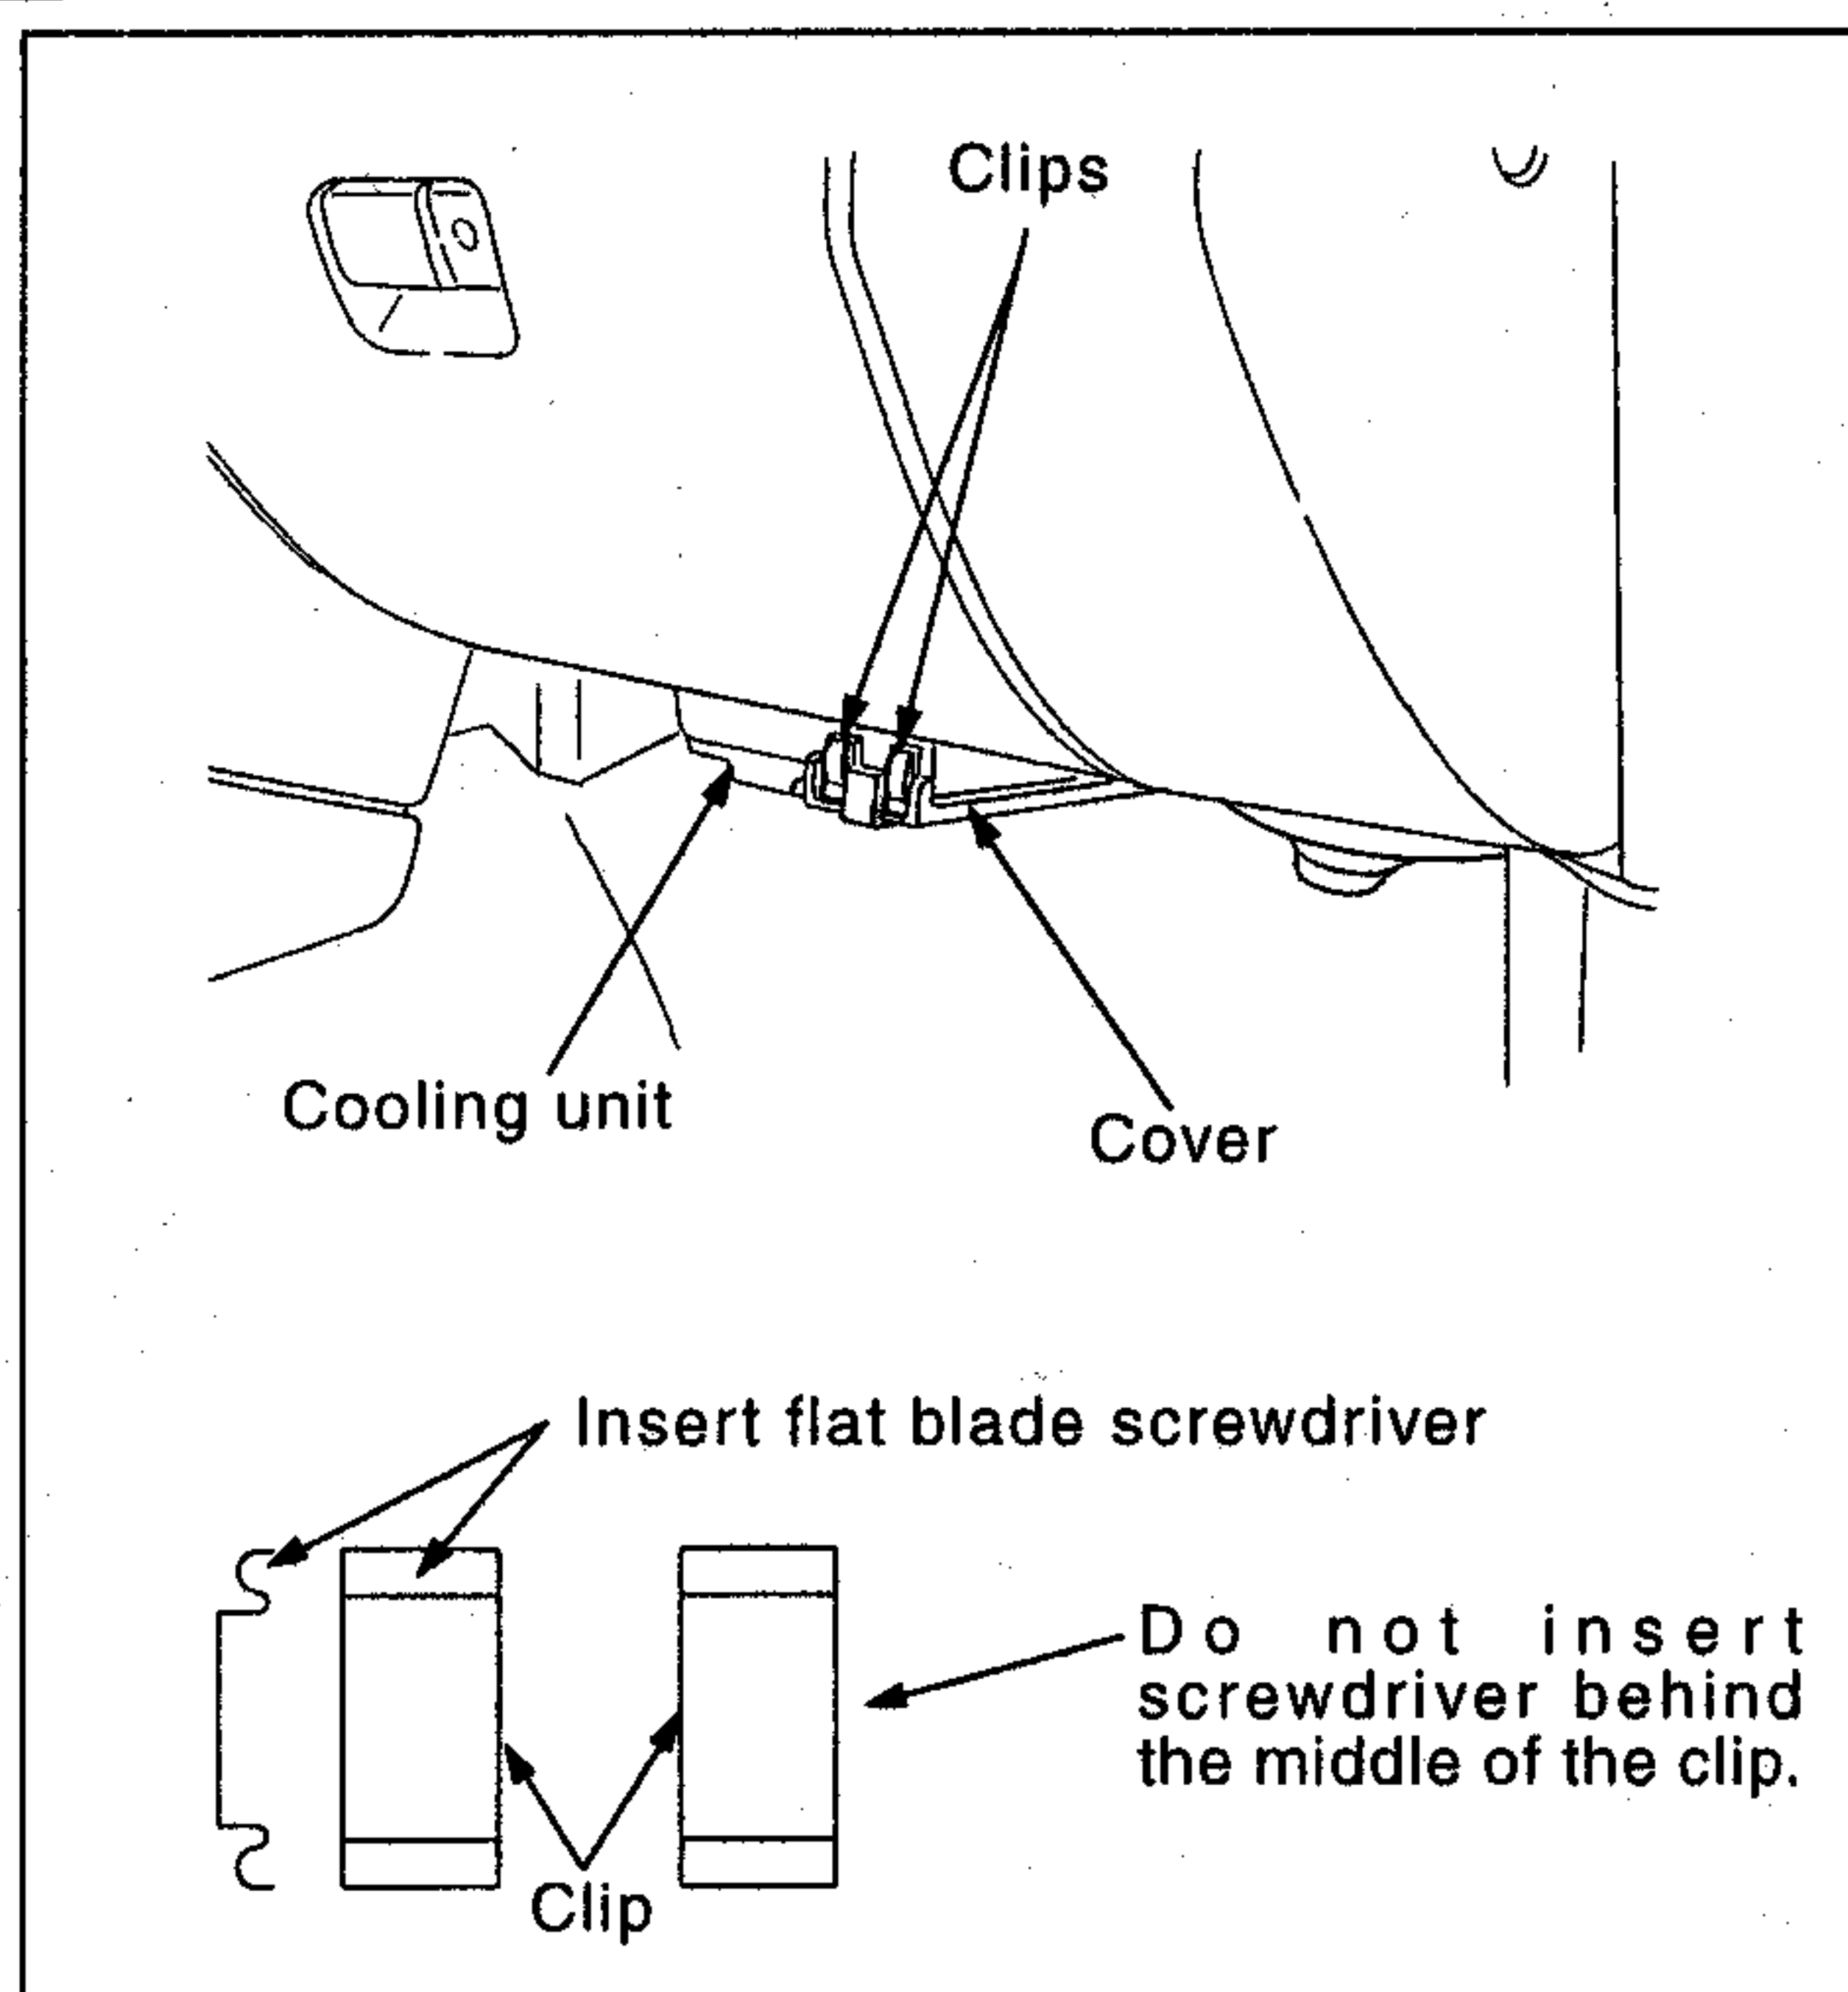

1. COVER REMOVAL

Remove the cover from the cooling unit by removing the two clips with a flat blade screwdriver and unhooking the hinge. The screwdriver must be inserted into the top of the clip. Do not pry the middle of the clip.

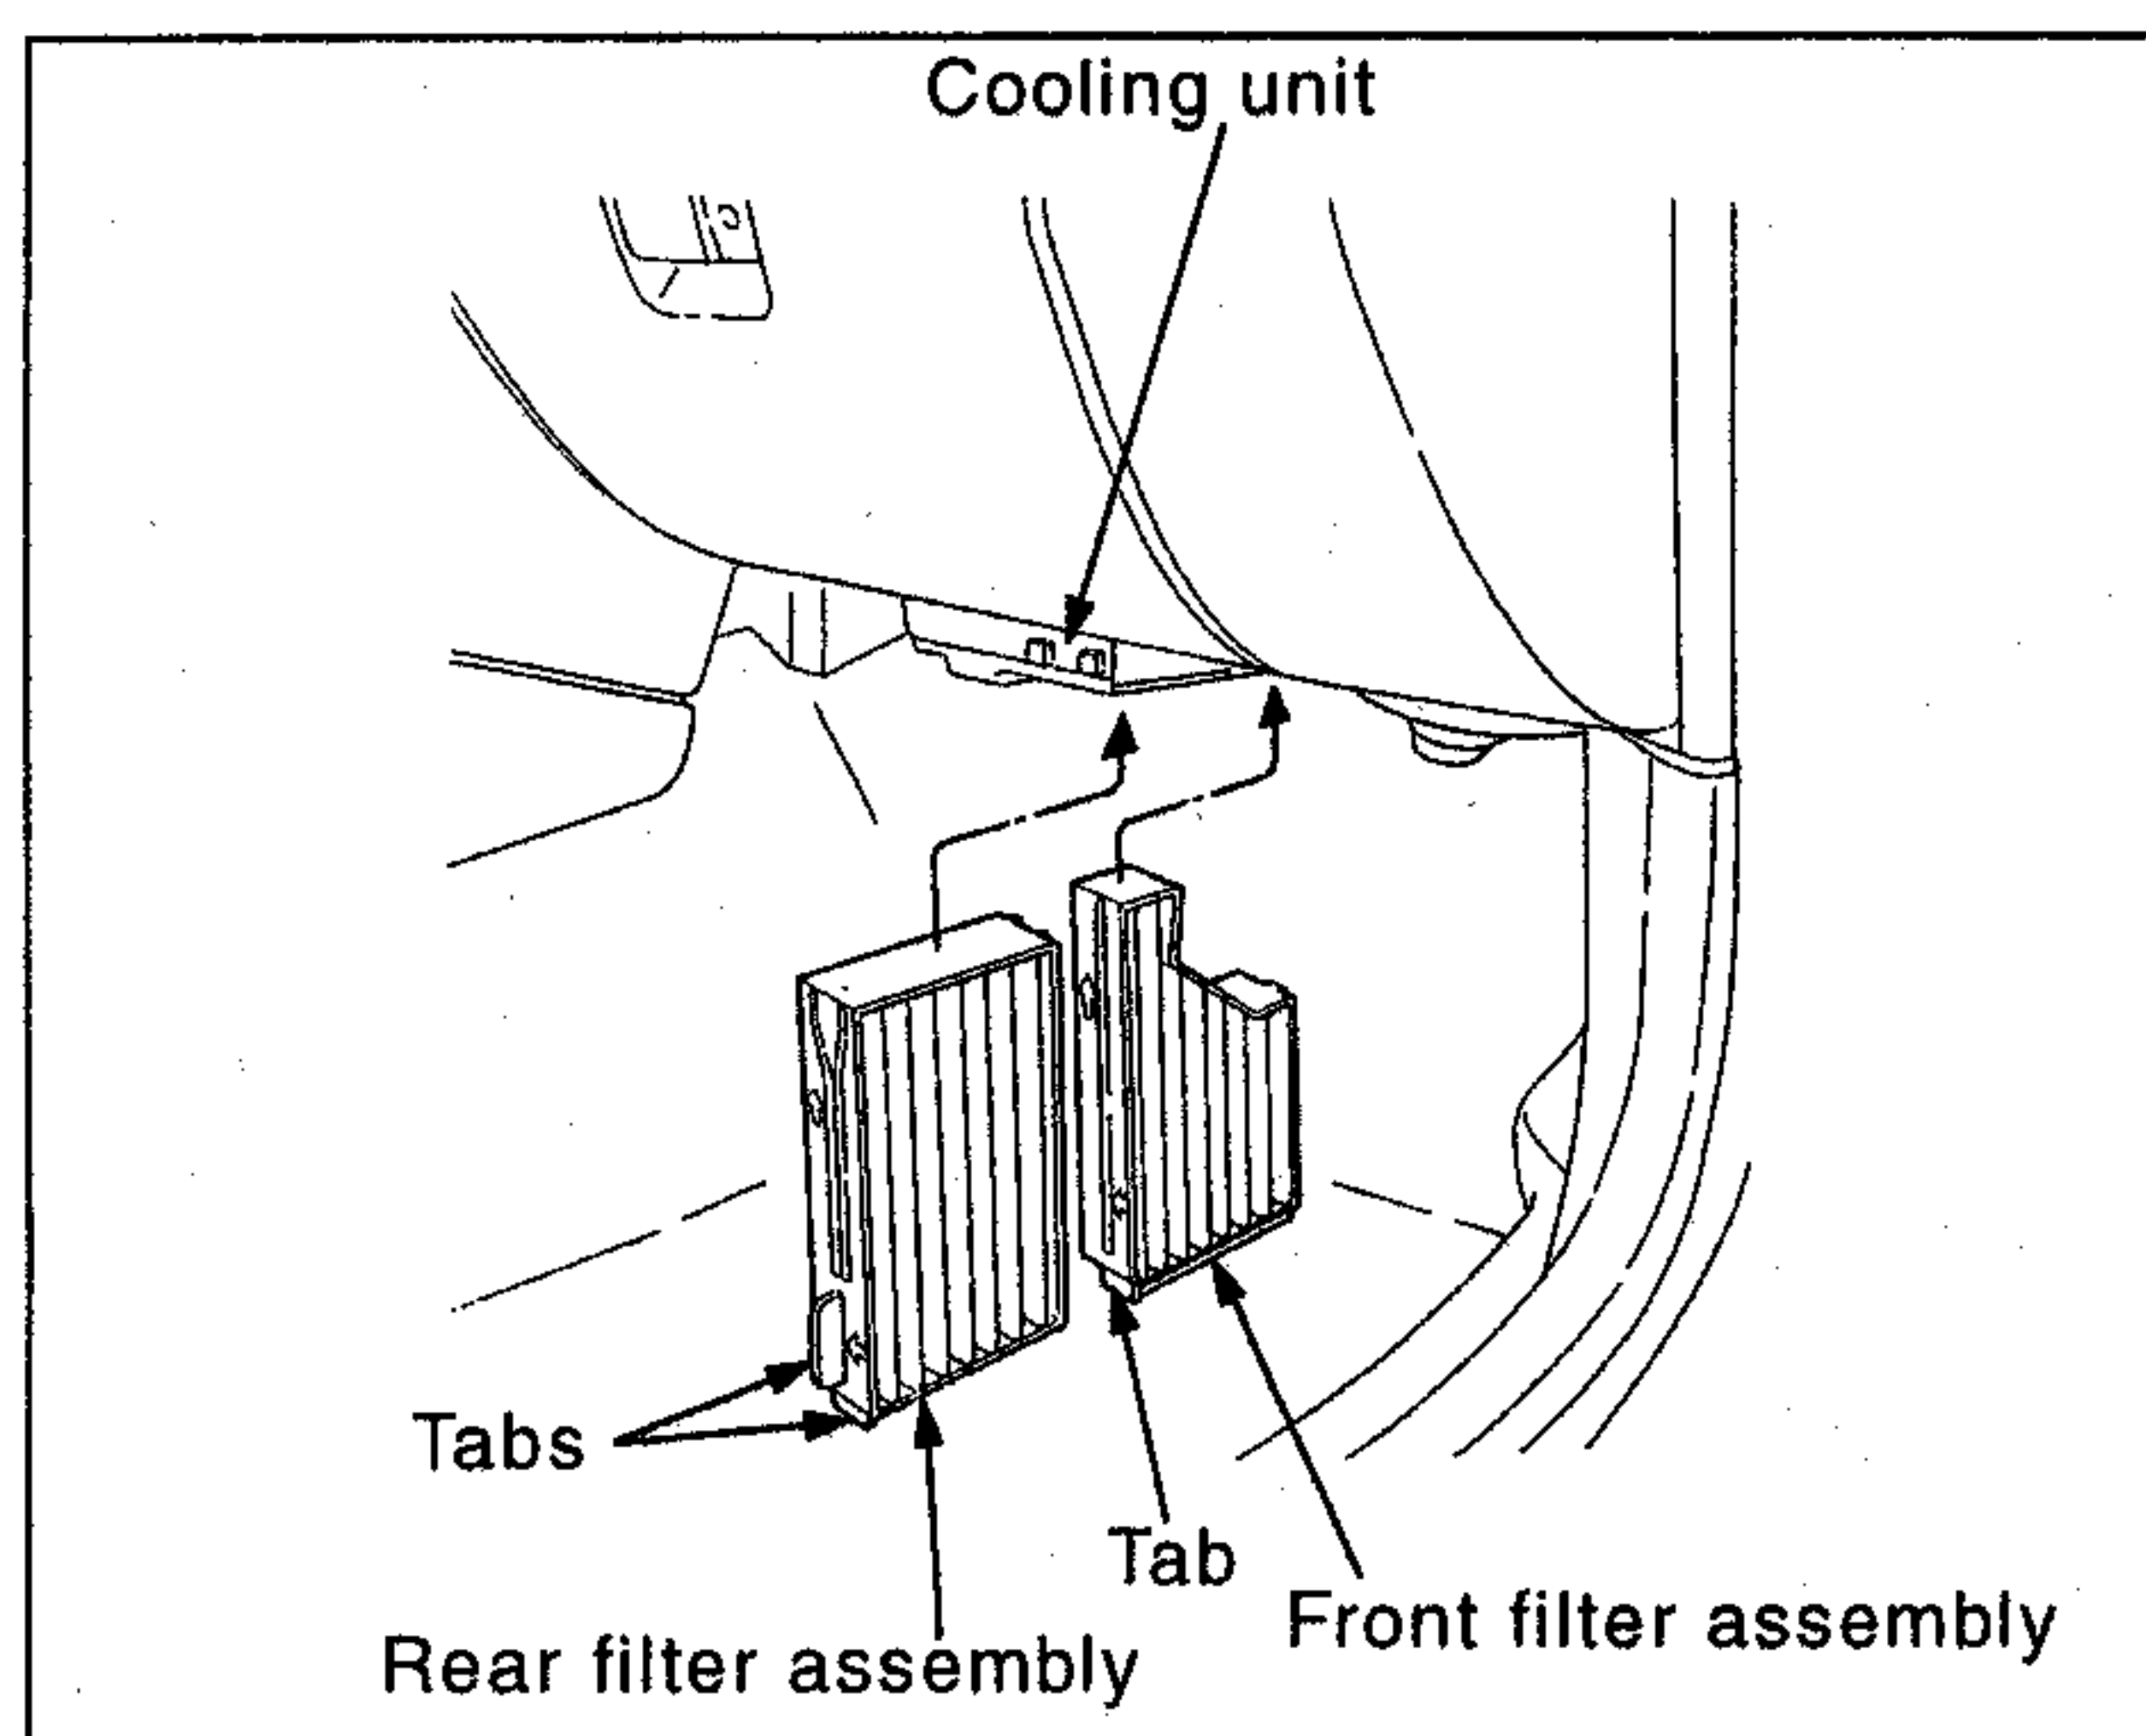


2. FILTER INSTALLATION

(1) Install the front filter assembly in the cooling unit, then install the rear filter assembly.

Note:

- Hold the filter tabs to facilitate installation.
- The passenger compartment side of each filter is marked with arrows (indicating 'UP' and the direction of air flow). Ensure the arrows point in the correct directions.
- Ensure each filter assembly's tongues and grooves fit the corresponding cooling unit and matching filter tongues and grooves.


(Continued)

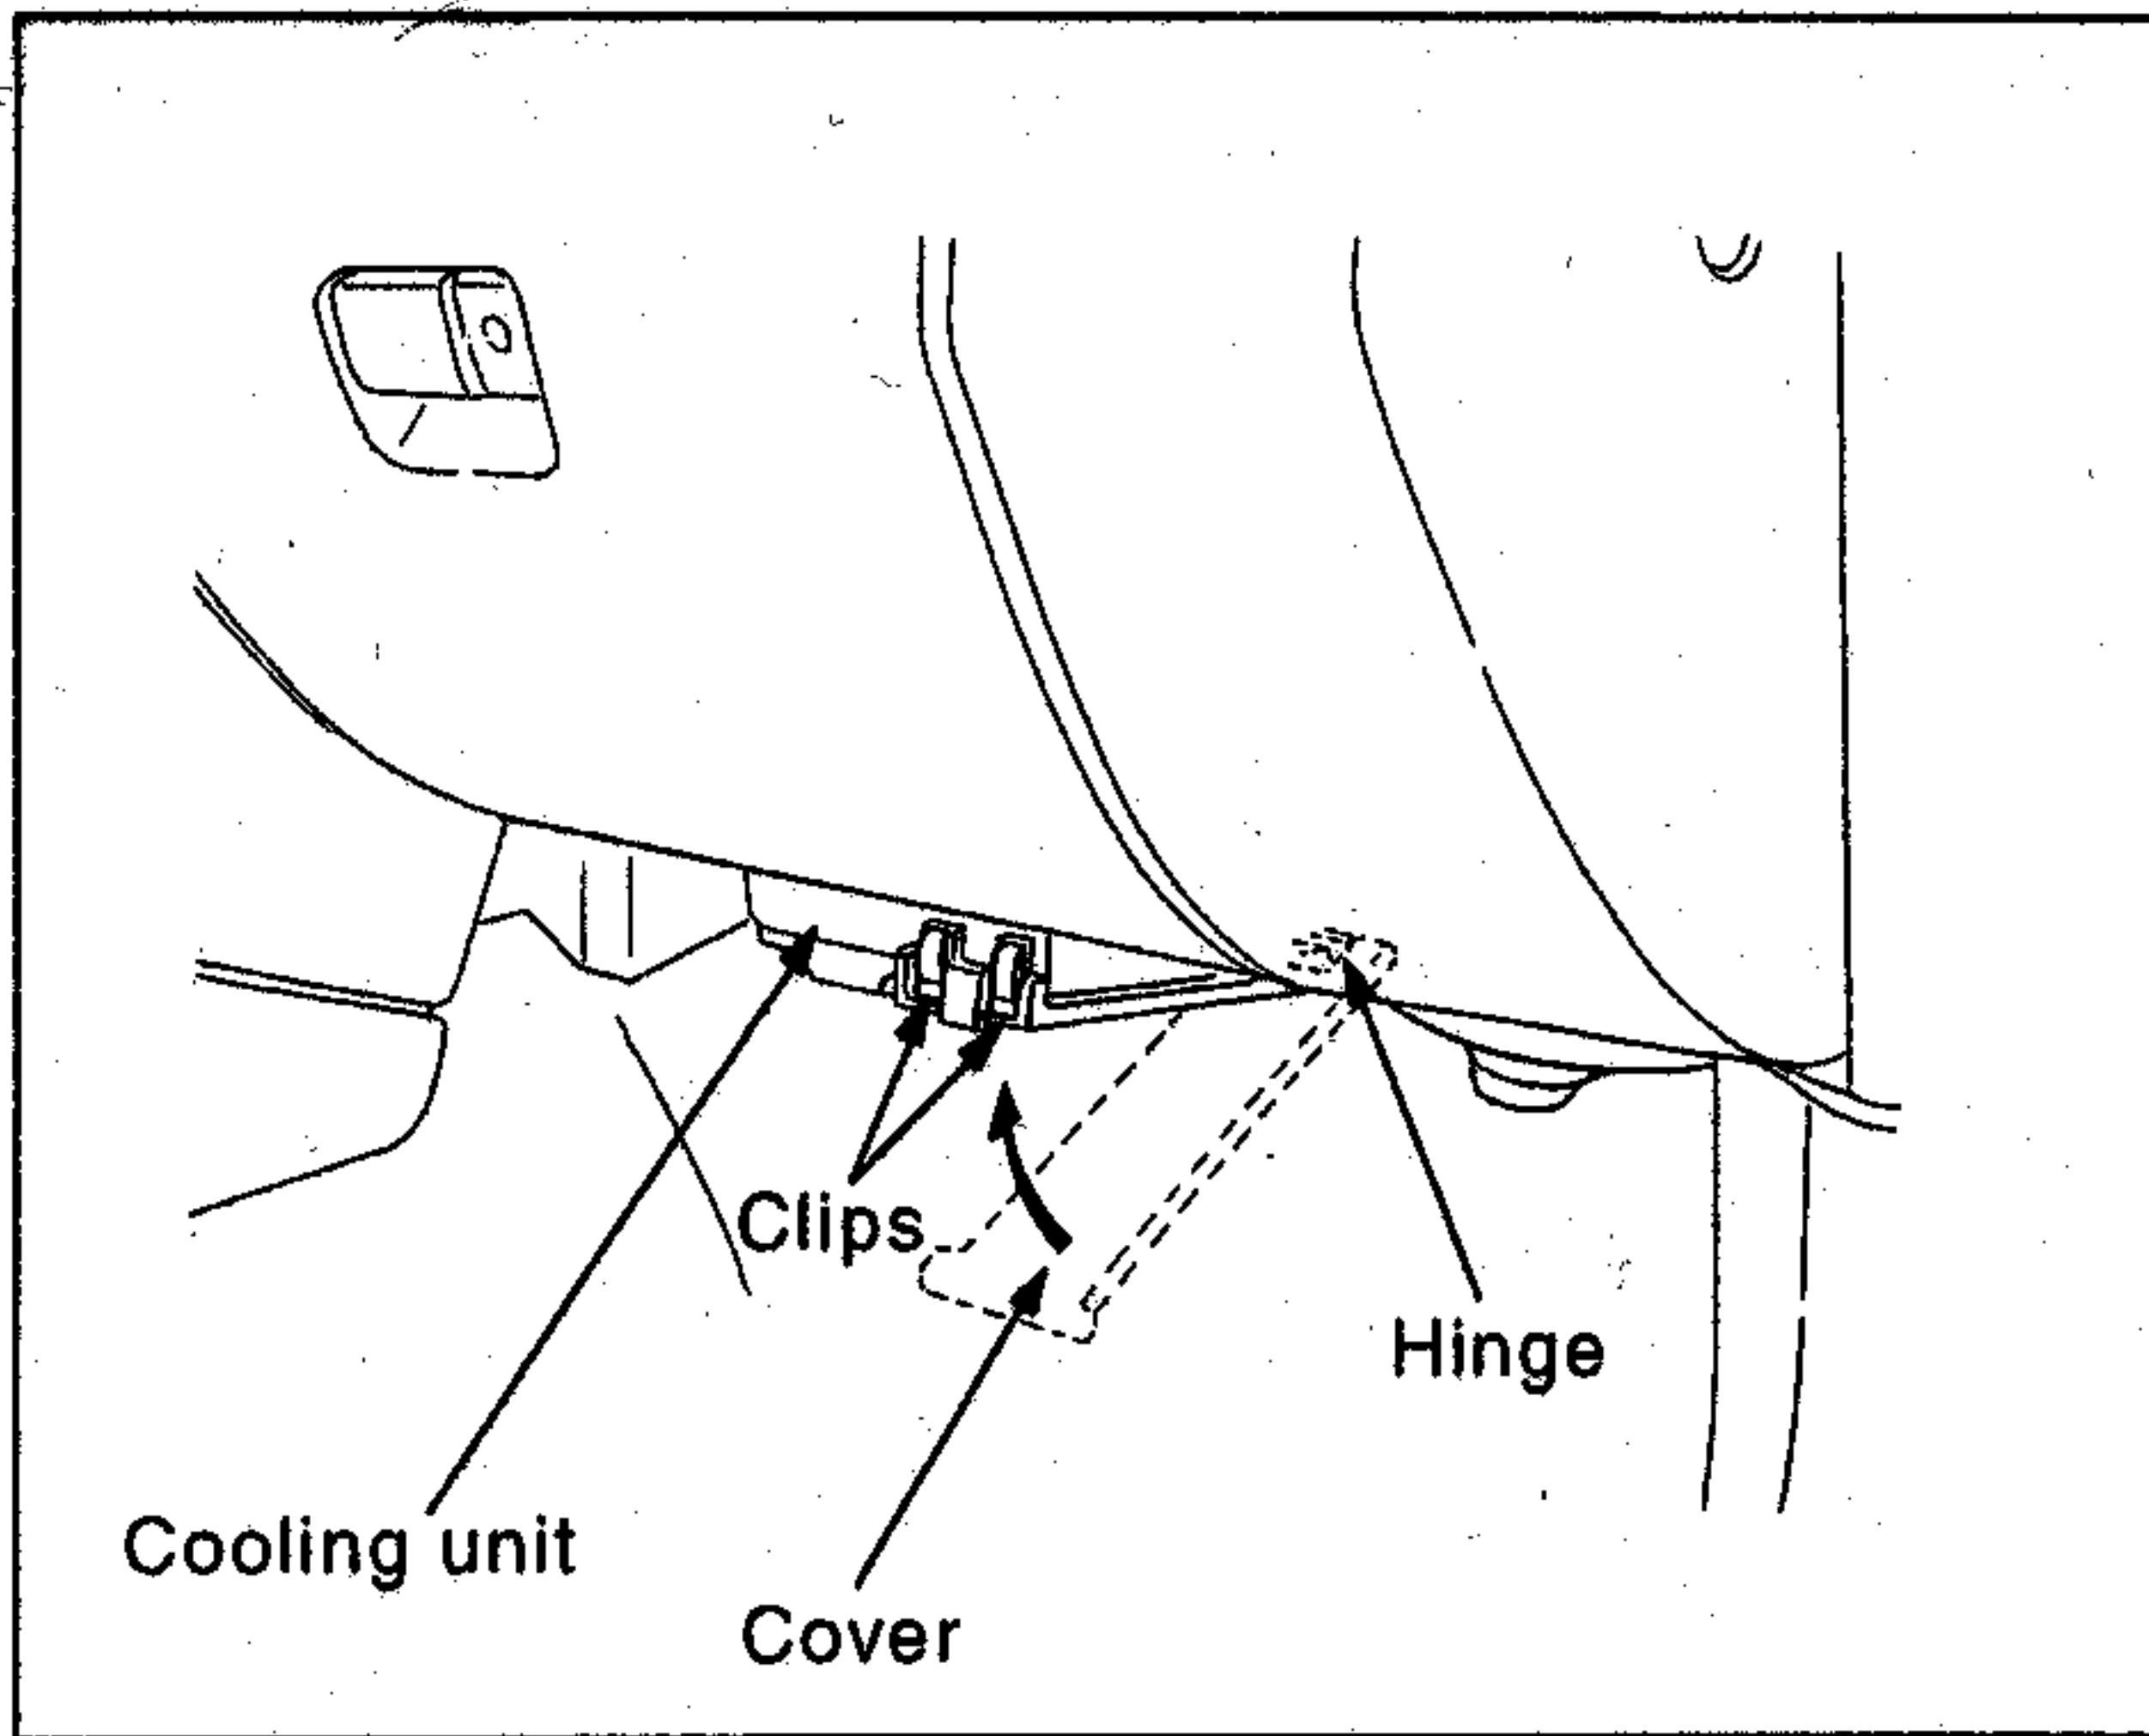

(2) Reinstall the cover and secure it using the clips.

Note:

Ensure no air leaks from the cooling unit through the cover.

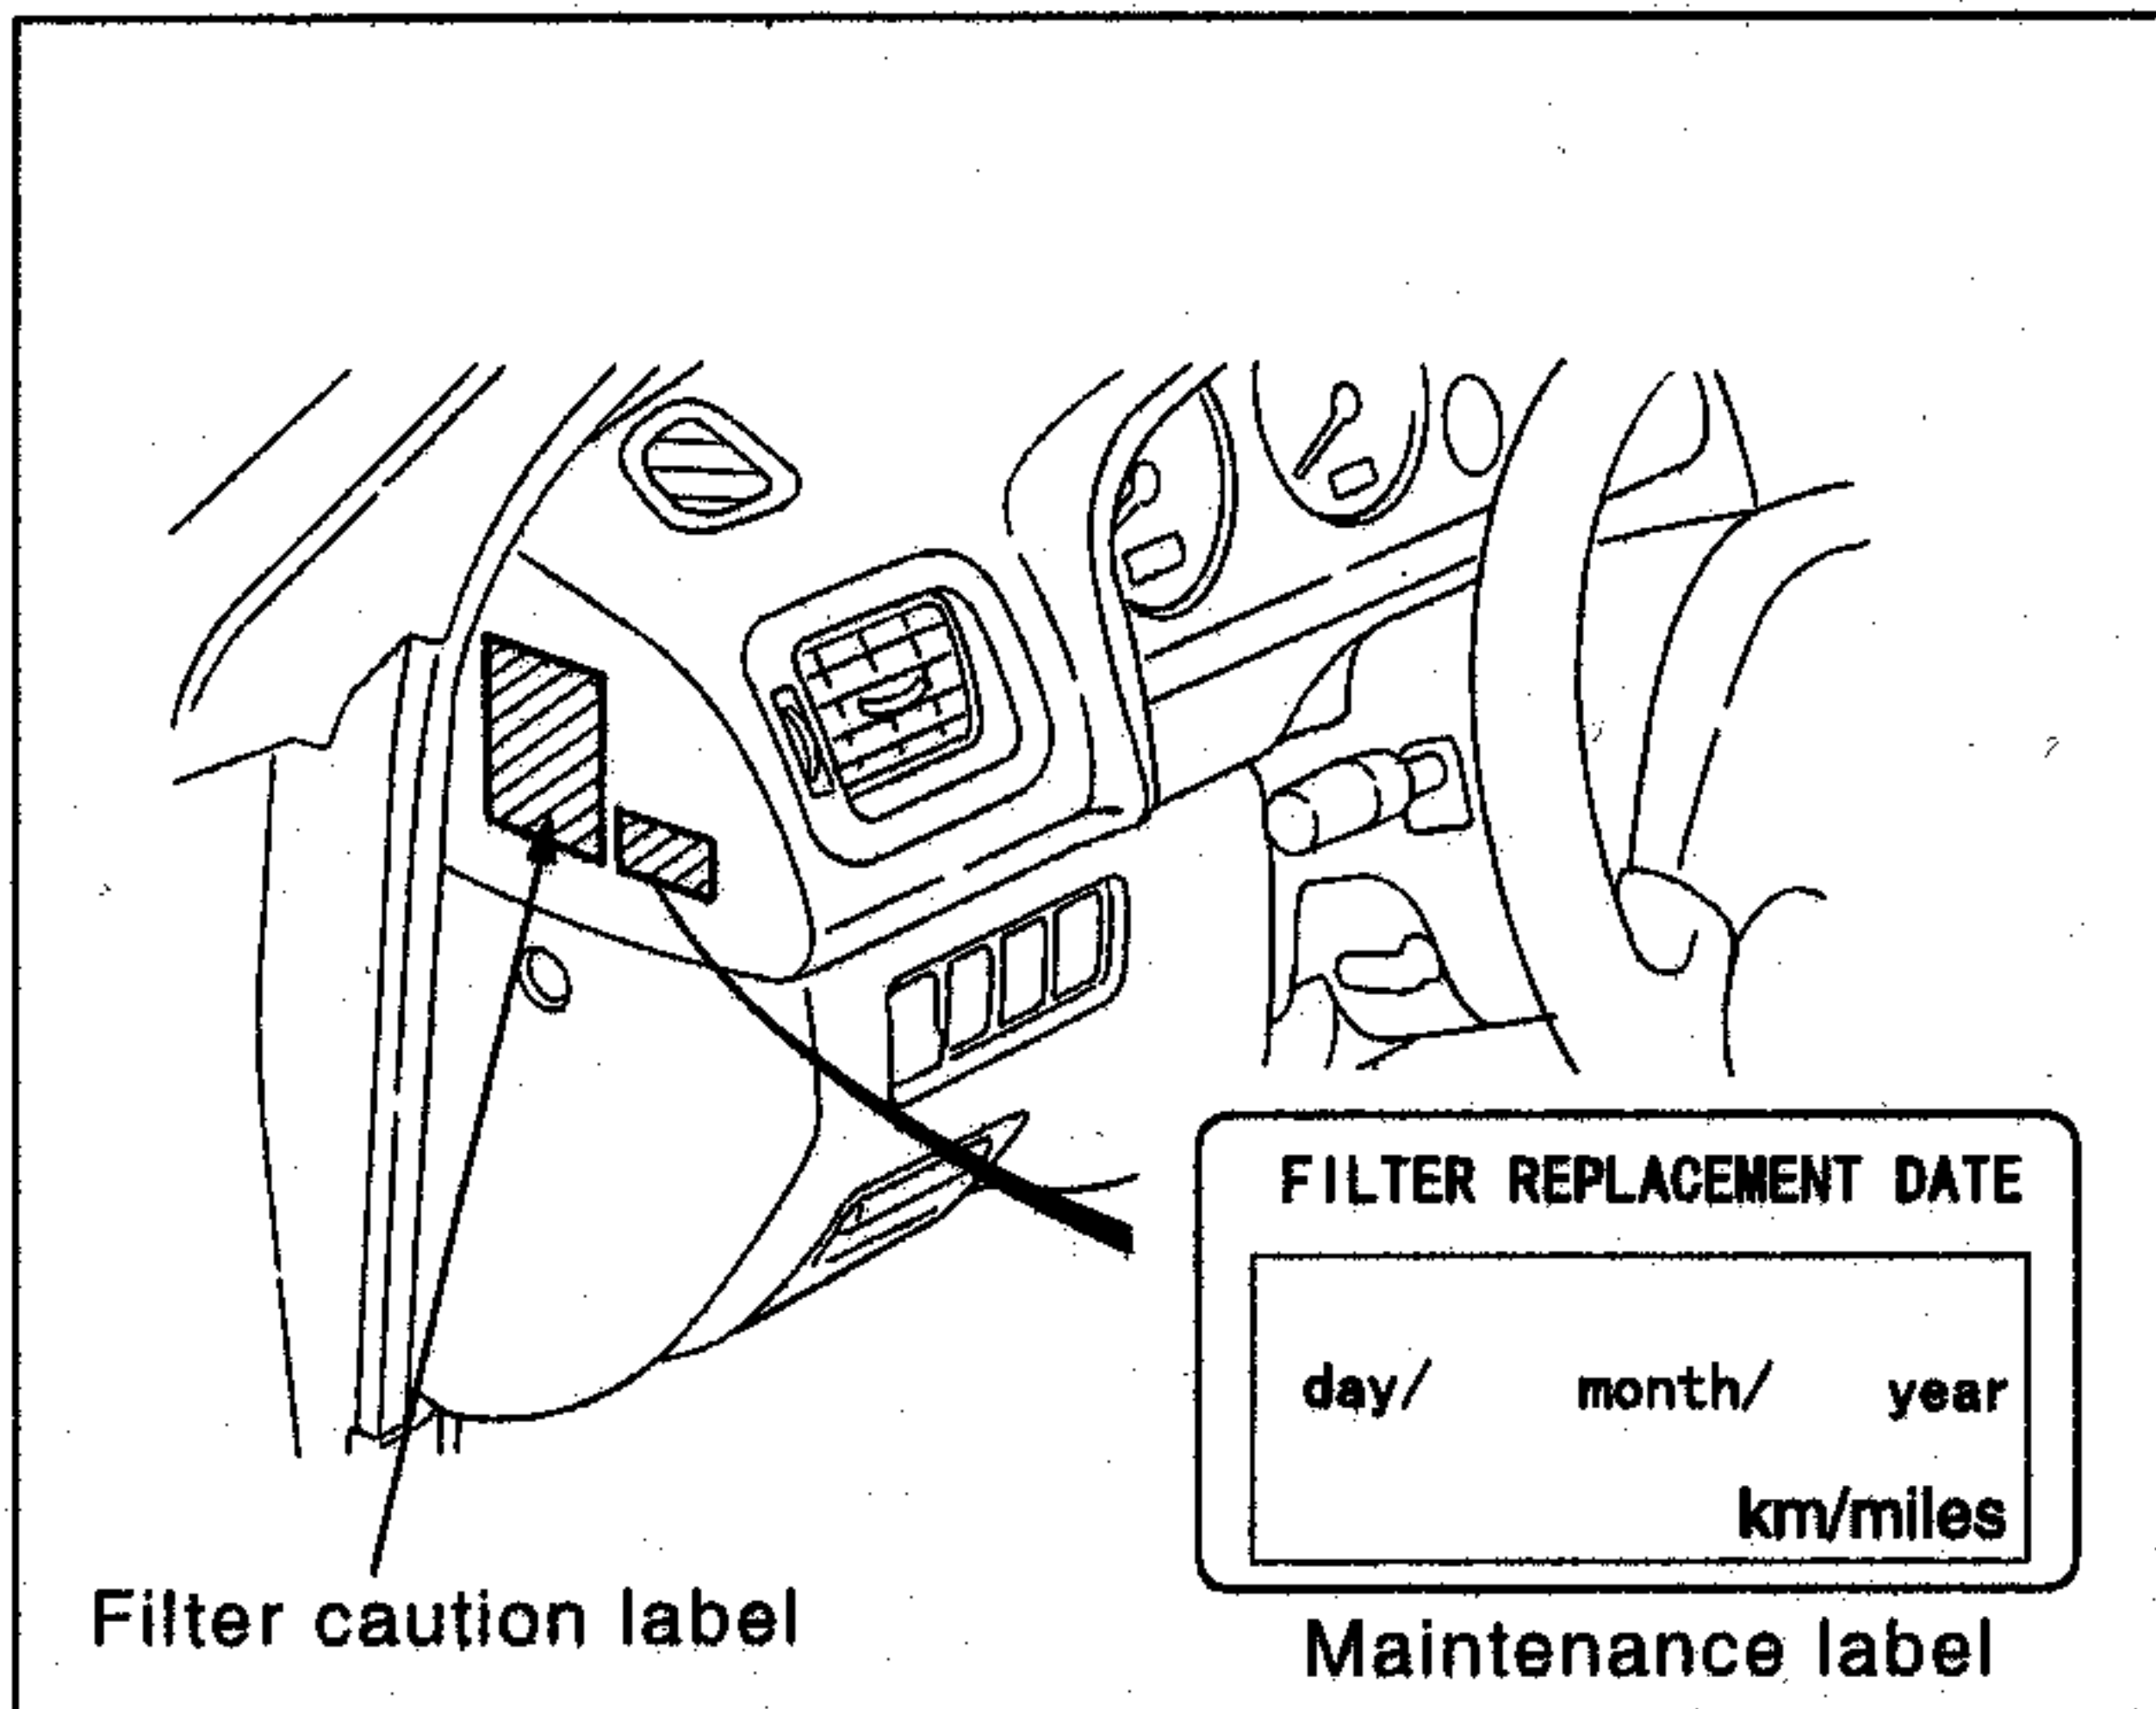

3. LABEL INSTALLATION

(1) Fill in the maintenance label with the replacement date and mileage.

(2) Install it on the left hand side of the instrument panel as shown.

Note:

The label is shown below.

FILTER REPLACEMENT DATE			
day /	month /	year	
km/miles			

- The filter must be replaced every 12,000 km (7,500 miles) or 1 year.
- The filter may need to be replaced more frequently in dusty areas.

(3) Install the caution label on the left hand side of the instrument panel next to the maintenance label as shown above.

Note:

The caution label reads as follows.

This vehicle is equipped with a ventilation air filter which collects dust, pollen, etc.

To ensure ventilation, A/C, heating and defrosting performance, the filter should be replaced regularly.

Contact your dealer for part replacement.

Replace the part every 12,000 km (7,500 miles) or 1 year.

Consult your dealer if the following occurs, even if it is not yet time to change the filter:

- Reduction of air flow through the vents.
- Windshield gets easily fogged or misted.