

MAINTENANCE SCHEDULE 1

For periodic maintenance of below 120,000 km (75,000 miles) or 96 months, carry out inspection by referring to the following table. For a maintenance period gone beyond these tables, apply them repeatedly as a set of 120,000 km (75,000 miles) or 96 months.

		Maintenance interval [Number of months or km (miles), whichever occurs first]										
	Months			12	24	36	48	60	72	84	96	Remarks
	× 1,000 km	1.6	5	15	30	45	60	75	90	105	120	
	× 1,000 miles	1	3	9	19	28	38	47	56	66	75	
1	Engine oil			R	R	R	R	R	R	R	R	
2	Engine oil filter			R	R	R	R	R	R	R	R	
3	Spark plug									R		
4	Drive belt(s)			I	I	I	I	I	I	I	I	
5	Timing belt									R		
6	Fuel line				I		I		I		I	
7	Fuel filter								R			
8	Air cleaner element			I	R	I	R	I	R	I	R	Note (1)
9	Cooling system				I		I		I		I	
10	Engine coolant	Replace after the first 11 years or 220,000 km (137,500 miles), and every six years or 120,000 km (75,000 miles) thereafter										
11	Clutch system				I		I		I		I	
12	Transmission oil				I		R		I		R	
13	ATF				I		R		I		R	
14	Front & rear differential oil				I		R		I		R	
15	Brake line				I		I		I		I	
16	Brake fluid				R		R		R		R	
17	Disc brake pad and disc			I	I	I	I	I	I	I	I	
18	Brake linings and drums				I		I		I		I	
19	Parking brake				I		I		I		I	
20	Suspension				I		I		I		I	
21	Wheel bearing										(I)	
22	Axle boots and joints			I	I	I	I	I	I	I	I	
23	Steering system				I		I		I		I	
24	A/C filter	Check every 12 months or every 12,000 km (7,500 miles).										Note (2)

Symbols used:

R: Replace

I: Inspect

(I): Recommended service for safe vehicle operation.

NOTE:

1. When the vehicle is used in extremely dusty conditions, the air cleaner element should be replaced more often.

2. When the A/C filter is installed.

2. EUROPEAN REGION (DIESEL ENGINE MODEL)

For periodic maintenance of below 120,000 km (75,000 miles) or 96 months, carry out inspection by referring to the following table. For a maintenance period gone beyond these tables, apply them repeatedly as a set of 120,000 km (75,000 miles) or 96 months.

	Maintenance interval										
	[Number of months or km (miles), whichever occurs first]										
Months			12	24	36	48	60	72	84	96	Remarks
× 1,000 km	1.6	5	15	30	45	60	75	90	105	120	
× 1,000 miles	1	3	9	19	28	38	47	56	66	75	
Engine oil			R	R	R	R	R	R	R	R	Note (3)
Engine oil filter			R	R	R	R	R	R	R	R	Note (3)
V-belt			I	I	I	I	I	I	I	I	Replace every 160,000 km (100,000 miles).
Fuel line				I		I		I		I	
Fuel system				P		P		P		P	Learning of the fuel injector spray amount
Fuel filter						R				R	
Air cleaner element			I	R	I	R	I	R	I	R	Note (1)
Cooling system				I		I		I		I	
Engine coolant	Replace when exceeding the first 11 years or 220,000 km (137,000 miles), second time and on is replace every 6 years or 120,000 km (75,000 miles).										
Clutch system				I		I		I		I	
Transmission oil				I		R		I		R	
Front and rear differential oil				I		R		I		R	
Brake line				I		I		I		I	

Brake fluid				R		R		R		R	
Disc brake pad and disc			I	I	I	I	I	I	I	I	
Parking brake				I		I		I		I	
Suspension				I		I		I		I	
Wheel bearing										(I)	
Axle boots and joints			I	I	I	I	I	I	I	I	
Steering system				I		I		I		I	
A/C filter	Replace every 12 months or 12,000 km (7,500 miles).									Note (2)	

Symbols used:

R: Replace

I: Inspect

P: Perform

(I): Recommended service for safe vehicle operation.

NOTE:

1. When the vehicle is used in extremely dusty conditions, the air cleaner element should be replaced more often.

2. When the A/C filter is installed.

3. When using under severe condition, replace the engine oil and the oil filter more frequently.

3. EXCEPT FOR EUROPE AREA

For periodic maintenance of over 50,000 km (30,000 miles) or 48 months, carry out inspection by referring to the following table. For a maintenance period gone beyond these tables, apply them repeatedly as a set of 50,000 km (30,000 miles) or 48 months.

		Maintenance interval [Number of months or km (miles), whichever occurs first]					
	Months		12	24	36	48	Remarks
	× 1,000 km	5	12.5	25	37.5	50	
	× 1,000 miles	3	7.5	15	22.5	30	
1	Engine oil		R	R	R	R	
2	Engine oil filter		R	R	R	R	

For periodic maintenance of over 100,000 km (60,000 miles) or 48 months, carry out inspection by referring to the following table. For a maintenance period gone beyond these tables, apply them repeatedly as a set of 100,000 km (60,000 miles) or 48 months.

		Maintenance interval [Number of months or km (miles), whichever occurs first]					
	Months		12	24	36	48	Remarks
	× 1,000 km	1.6	25	50	75	100	
	× 1,000 miles	1	15	30	45	60	
3	Spark plug					R	

4	Drive belt(s)		I	I	I	I	
5	Timing belt					R	
6	Fuel line			I		I	
7	Fuel filter					R	
8	Air cleaner element		I	R	I	R	Note (1)
9	Cooling system			I		I	
10	Engine coolant	Replace after the first 11 years or 220,000 km (137,500 miles), and every six years or 120,000 km (75,000 miles) thereafter					
11	Clutch system		I	I	I	I	
12	Transmission oil			R		R	
13	ATF			R		R	
14	Front and rear differential oil			R		R	Note (2)
15	Brake line		I	I	I	I	
16	Brake fluid			R		R	
17	Disc brake pad and disc		I	I	I	I	
18	Brake linings and drums			I		I	
19	Parking brake		I	I	I	I	
20	Suspension		I	I	I	I	
21	Wheel bearing					(I)	
22	Axle boots and joints		I	I	I	I	
23	Steering system (Power steering)		I	I	I	I	
24	A/C filter	Check every 12 months or every 12,000 km (7,500 miles).					Note (3)

Symbols used:

R: Replace

I: Inspect

(I): Recommended service for safe vehicle operation.

NOTE:

1. When the vehicle is used in extremely dusty conditions, the air cleaner element should be replaced more often.

2. When towing is performed, replace the rear differential oil within 24,000 km (15,000 miles). (KA model)

3. When the A/C filter is installed.