

SUBARU

Parts and Accessories.



INSTALLATION INSTRUCTIONS

BUMPER CORNER MOLDING

PART# E7710AS103

MADE IN HUNGARY


PARTS INCLUDE

- | | |
|------------------------------|--------|
| 1. Rear Bumper Molding | Qty. 4 |
| 2. Alcohol Swab | Qty. 2 |
| 3. Installation Instructions | Qty. 1 |


TOOLS REQUIRED

- | | |
|----------------|---------------|
| Heat Gun | Grease Pencil |
| Measuring Tape | Cloth |


2003- FORESTER (PAINTED BUMPERS ONLY)

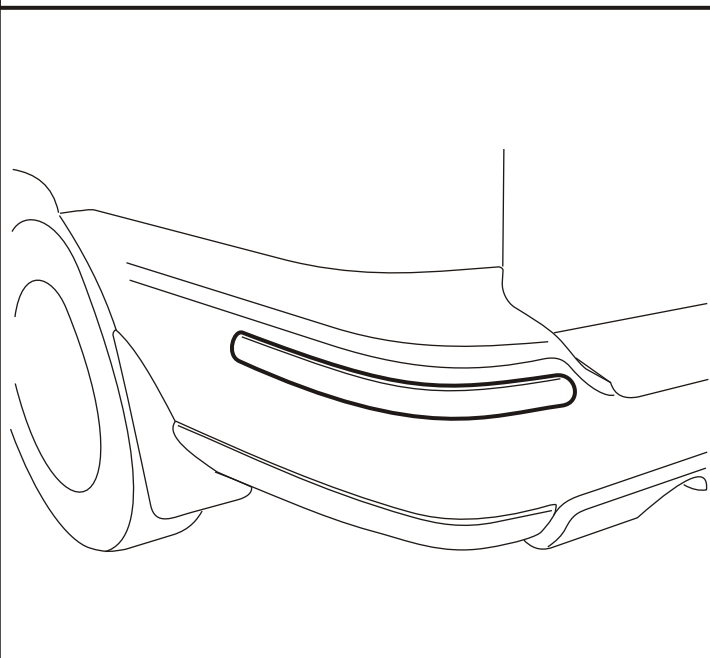


2002- IMPREZA ALL MODELS

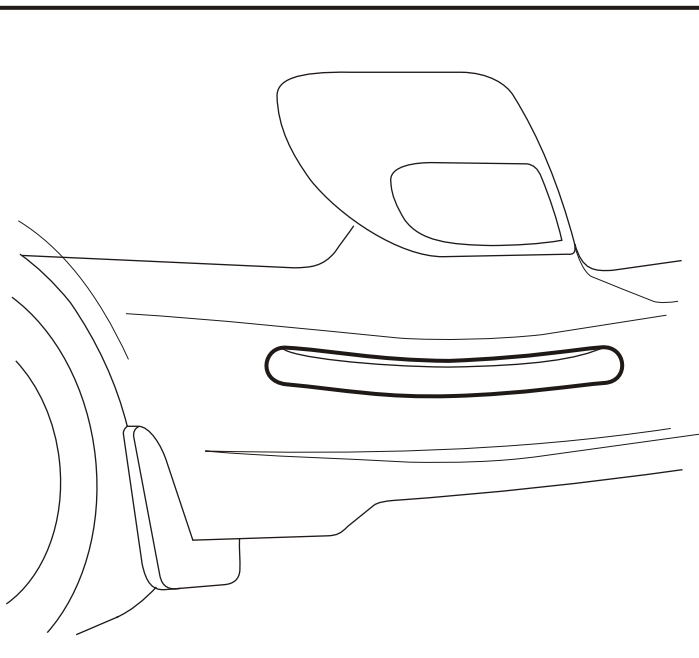

LEGACY OUTBACK WAGON AND SEDAN 2000-

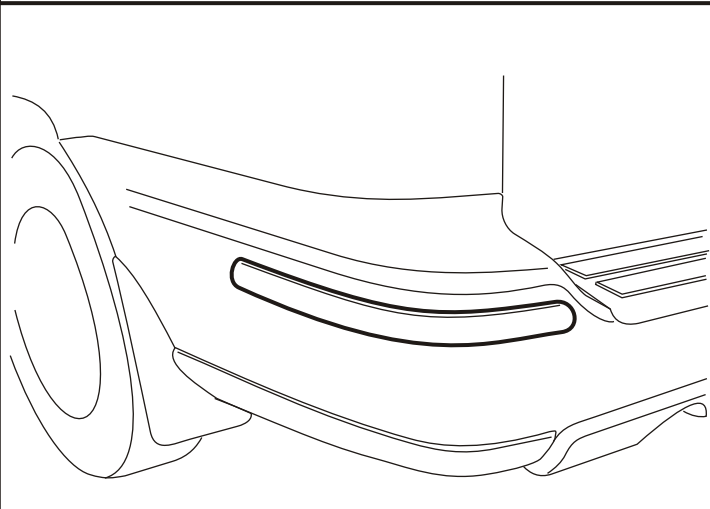

LEGACY SEDAN AND WAGON 2000-

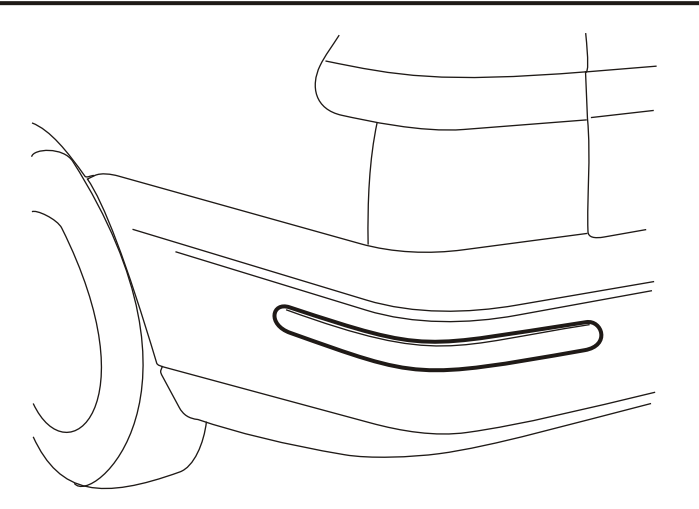

It is recommended that this product be installed by a trained Subaru Technician at your local Subaru dealer. If you intend to install this product and you feel that additional detailed instructions might be of benefit to you, please contact your local Subaru dealer for more detailed installation instructions.


PRE-INSTALLATION NOTES

1. Be careful not to scratch the vehicle body or bumpers during installation.
2. Do not wash vehicle for 24 hours following installation of the bumper molding.
3. Areas of application must be prepared for proper adhesion of the mounting tape. The surface must be clean, dry, oil and wax free.
4. If the temperature is below 60°F (15°C), heat the double sided tape and the bumper surface to a temperature of 80°F (27°C).
5. Not to be used on unpainted bumpers.
6. Review installation instruction thoroughly prior to installation.



INSTALLATION STEPS

1. Clean area of application using alcohol swab.
2. Measure with a measuring tape and mark using a grease pencil.
3. Center bumper molding and mark using a grease pencil.
4. Without removing red tape liner, check positioning on rear bumper.
5. Remove half-round and top strip red tape liner.
6. Peel back 1"(2.5cm) to 2"(5cm) of bottom red tape liner from each end and fold down as shown.
7. Position bumper molding between the grease pencil marks.
8. Peel remaining red liner from behind the bumper molding and press firmly onto surface for 10 seconds.



2002- IMPREZA ALL MODELS (Rear Bumper Only)

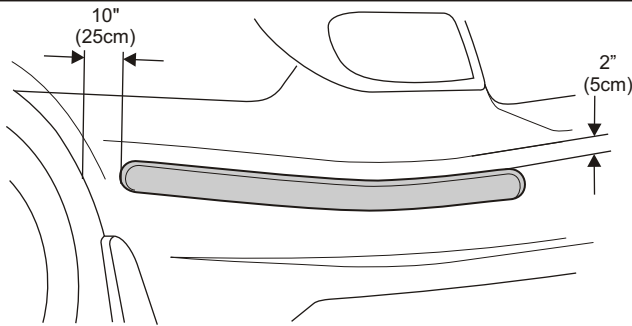



2003- FORESTER (Painted Bumpers Only)

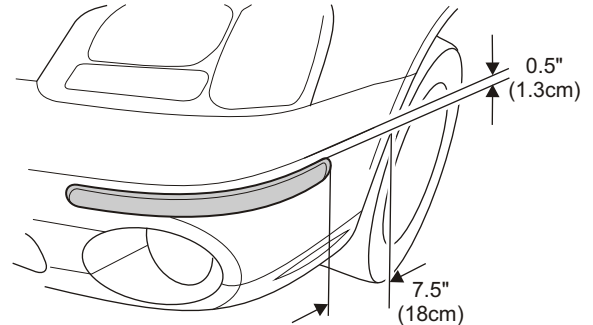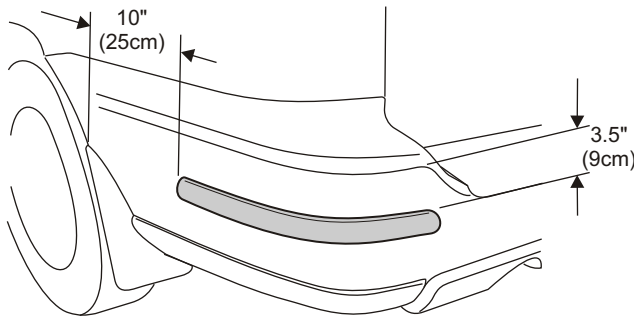

2000- LEGACY SEDAN AND OUTBACK SEDAN

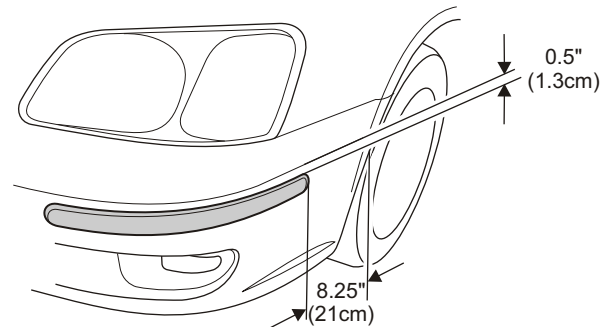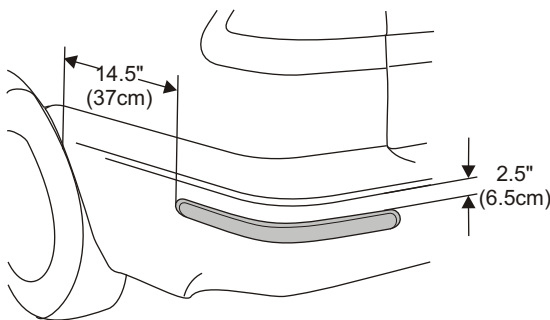

2000- LEGACY WAGON

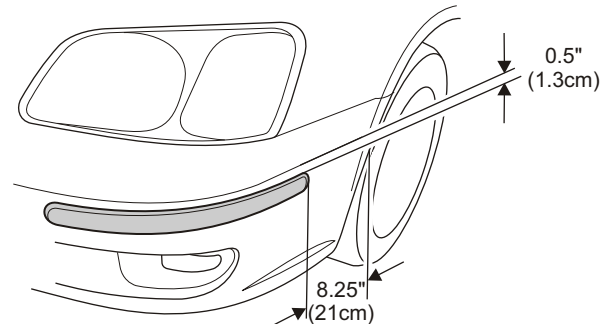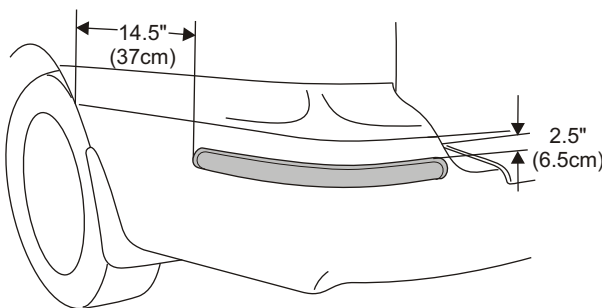

2000- LEGACY OUTBACK WAGON

