

SUBARU®

INSTALLATION INSTRUCTIONS



SIDE NET FORESTER

F551SSA000

F551SSA010 (Replacement Hardware Kit)

Kit Contents

- 1 x Envelope Net
- 1 x Threaded Stud
- 1 x Self Tapping Stud
- 2 x Mushroom Anchors

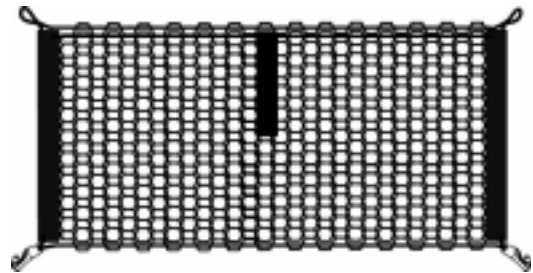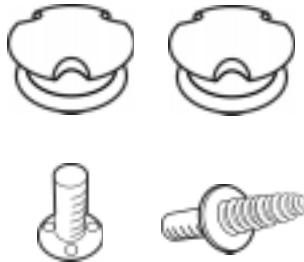

Tools Required:

- Power Drill
- 6.35mm (1/4") drill bit
- 4.76mm (3/16") drill bit
- 11.1125mm (7/16") drill bit




1.



2.

Fold down seat

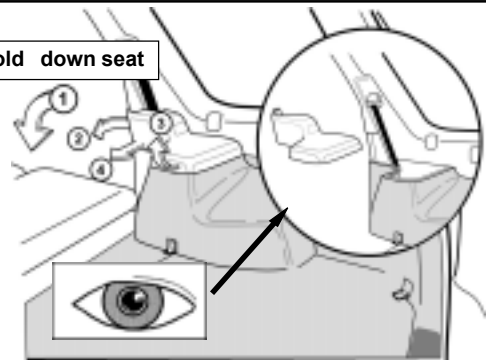


Note: View of passenger side. Can repeat for drivers side.

3.


6.35mm (1/4")

NOTE: Look for
molded circle/ring

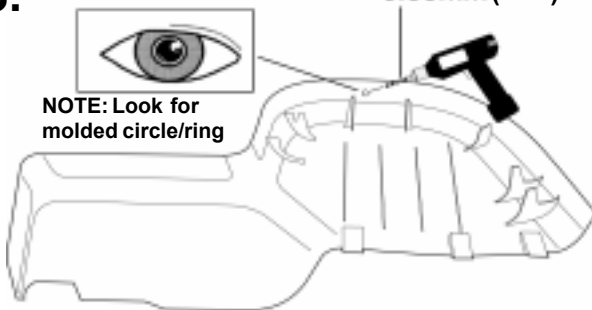


4.




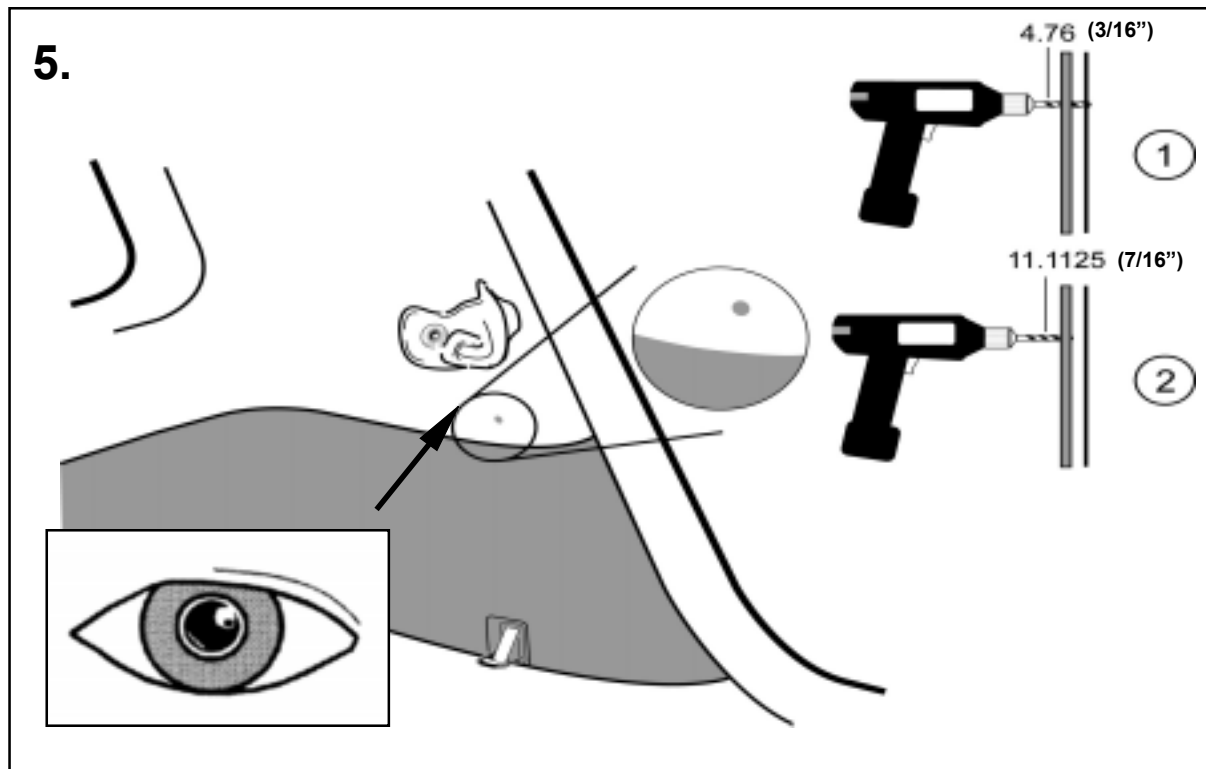


Note: View of passenger side. Can repeat for drivers side.

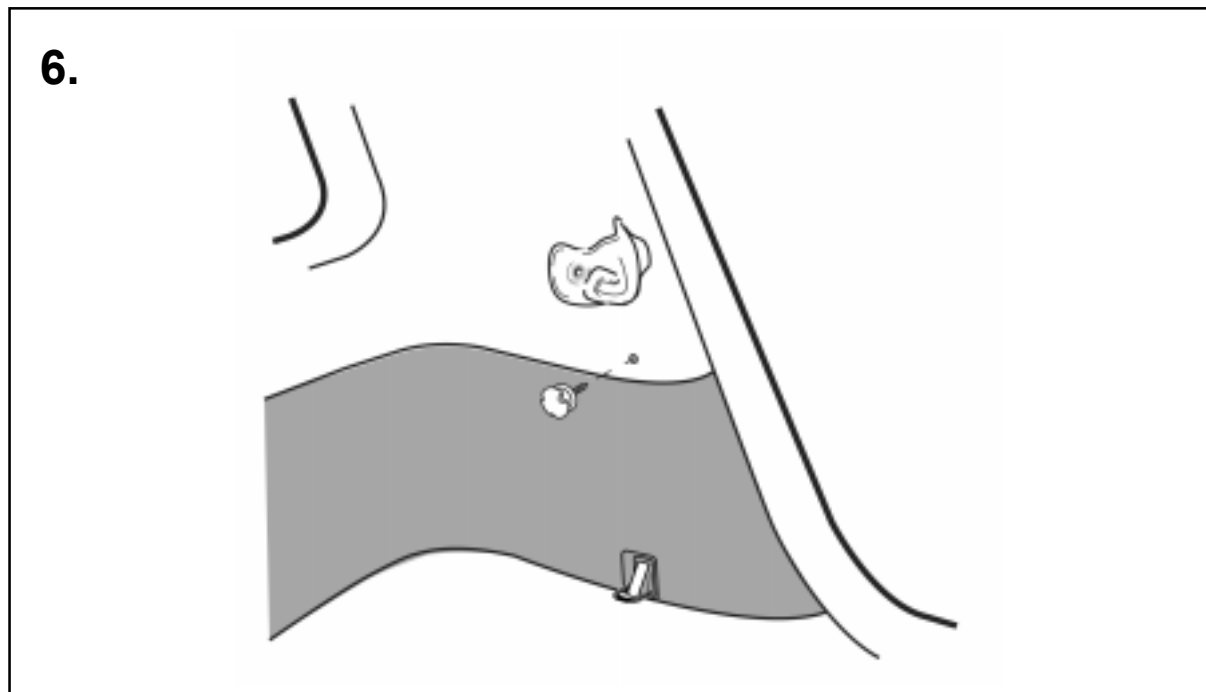

7.

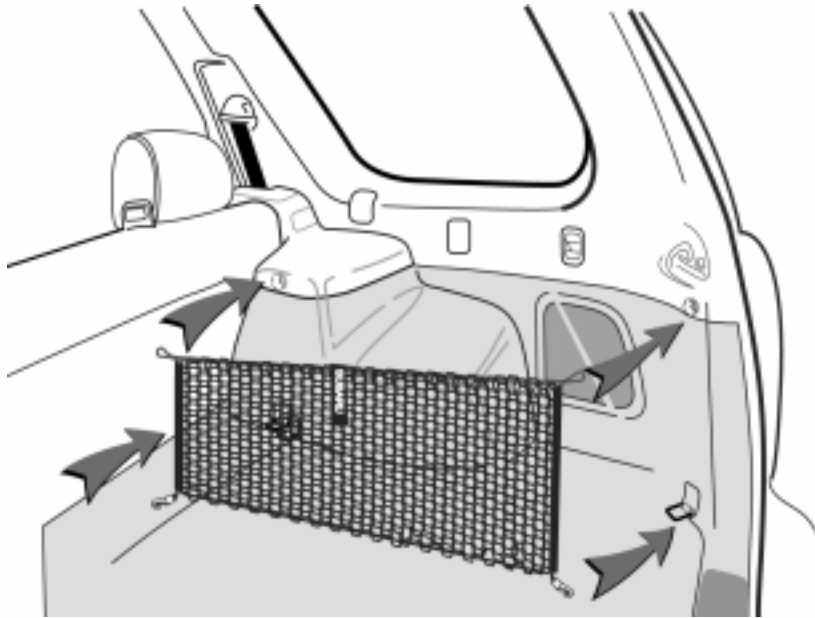

8.

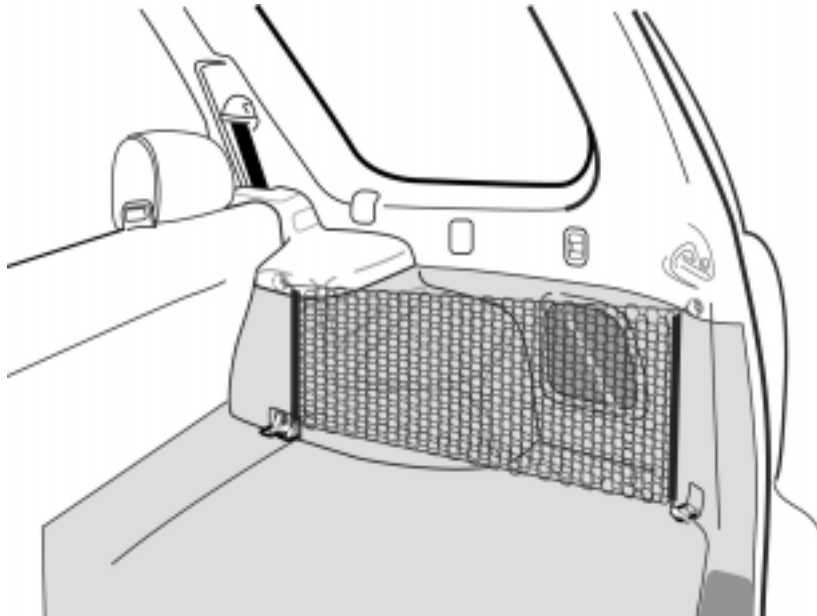

It is recommended that this product be installed by a trained Subaru Technician at your local Subaru dealer. If you intend to install this product and you feel that additional detailed instructions might be of benefit to you, please contact your local Subaru dealer for more detailed installation instructions.