



INSTALLATION INSTRUCTIONS



REAR VERTICAL NET FORESTER

F551SSA100

F551SSA010 (Replacement Hardware Kit)



Kit Contents:

- 1 x Envelope Net
- 2 x Mushroom Anchors
- 2 x Self Tapping Studs

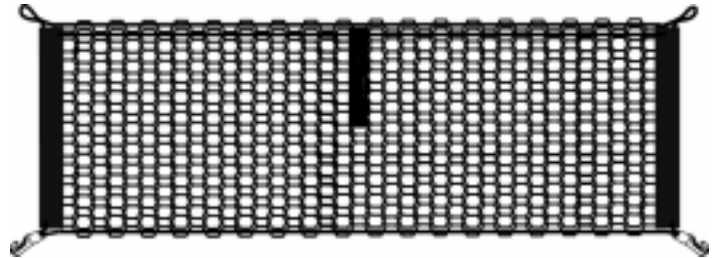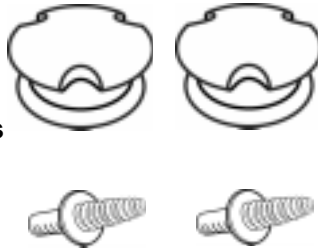


Tools Required:

- Power Drill
- 4.76mm (3/16") drill bit
- 11.1125mm (7/16") drill bit

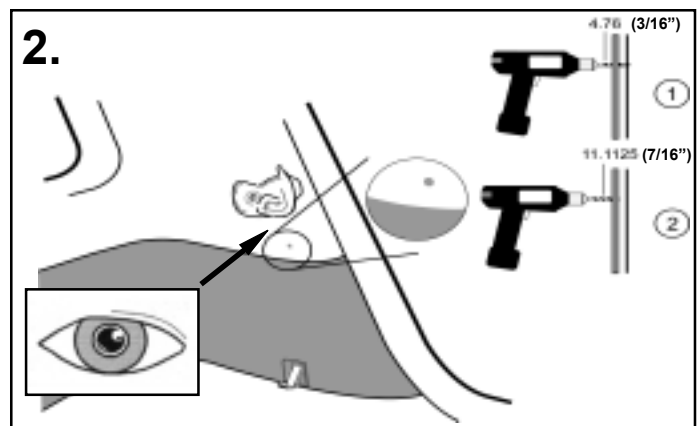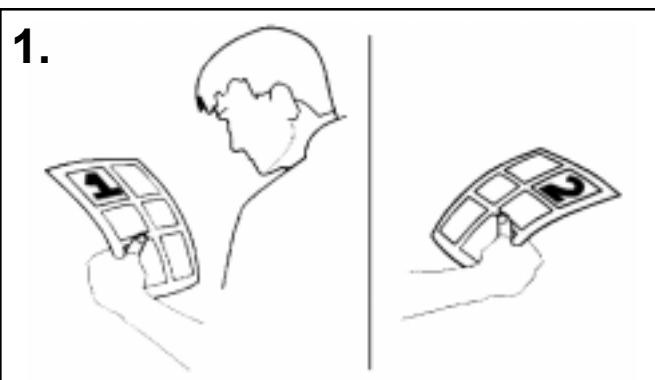


Note: View of passenger side. Must repeat for drivers side.


3.

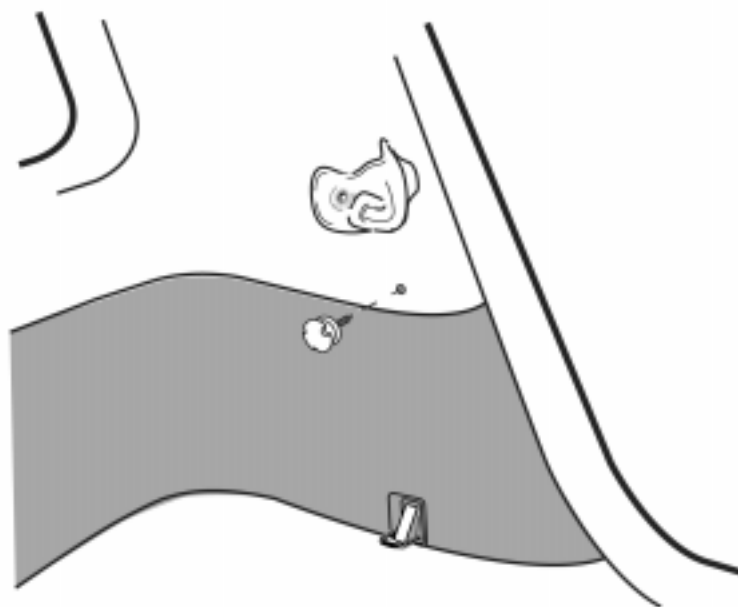

4.

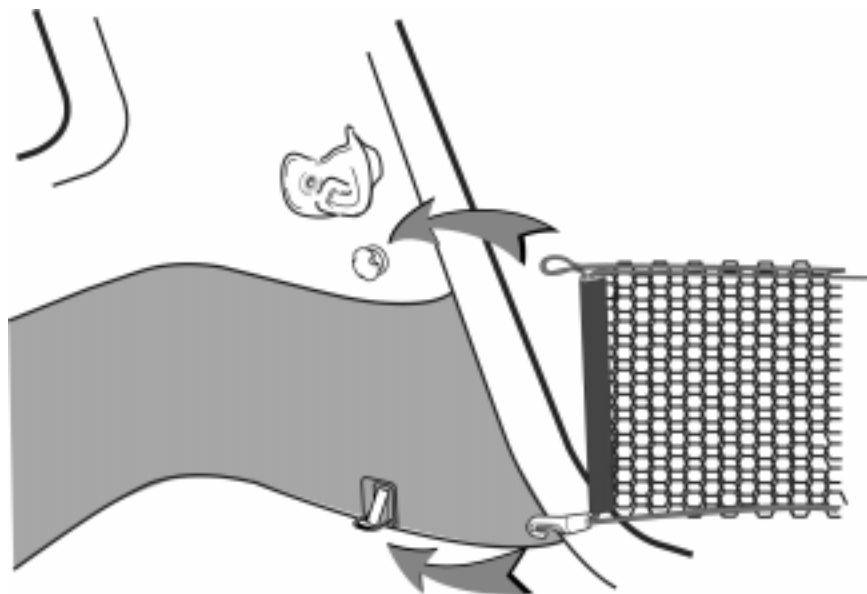

5.

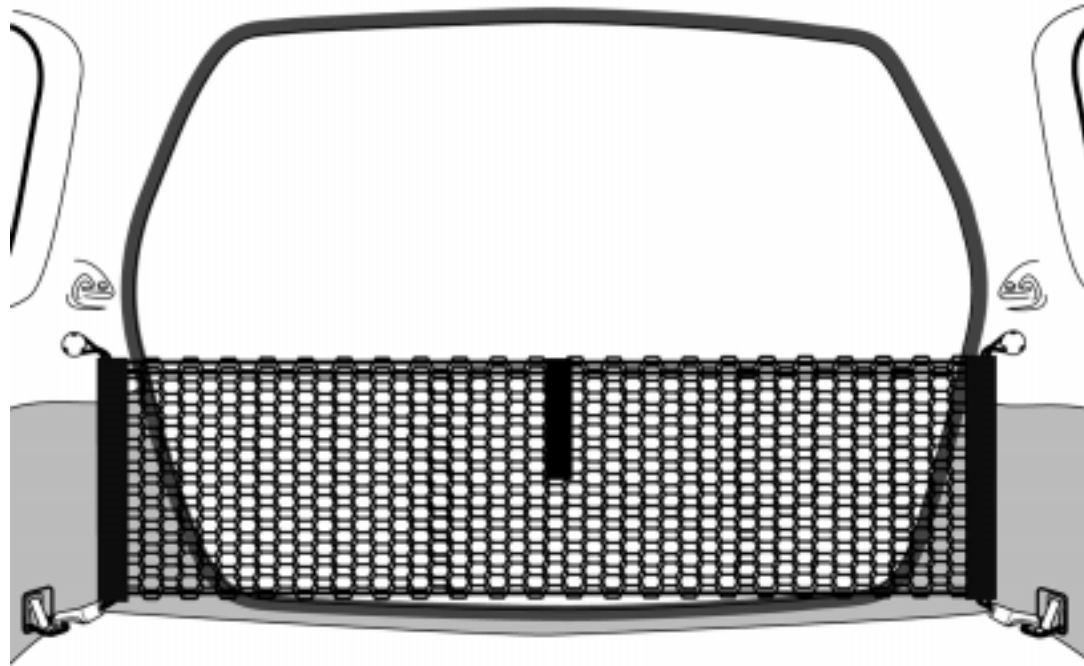

It is recommended that this product be installed by a trained Subaru Technician at your local Subaru dealer. If you intend to install this product and you feel that additional detailed instructions might be of benefit to you, please contact your local Subaru dealer for more detailed installation instructions.