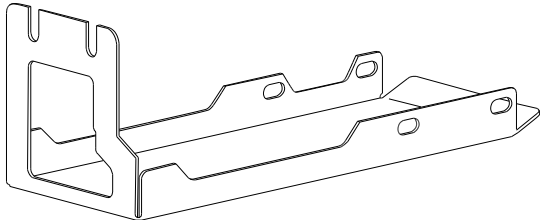




SUBARU


INSTALLATION
INSTRUCTIONS

DIFFERENTIAL PROTECTOR FOR LEGACY, FORESTER AND IMPREZA B031SSA000


KIT CONTENTS

	(B)	2		M10-1.25 X 60mm
	(C)	2		M10-1.25 X 45mm
	(D)	4		M10
	(E)	2		32mm X 22mm
	(F)	2		16mm X 22mm

TOOLS REQUIRED

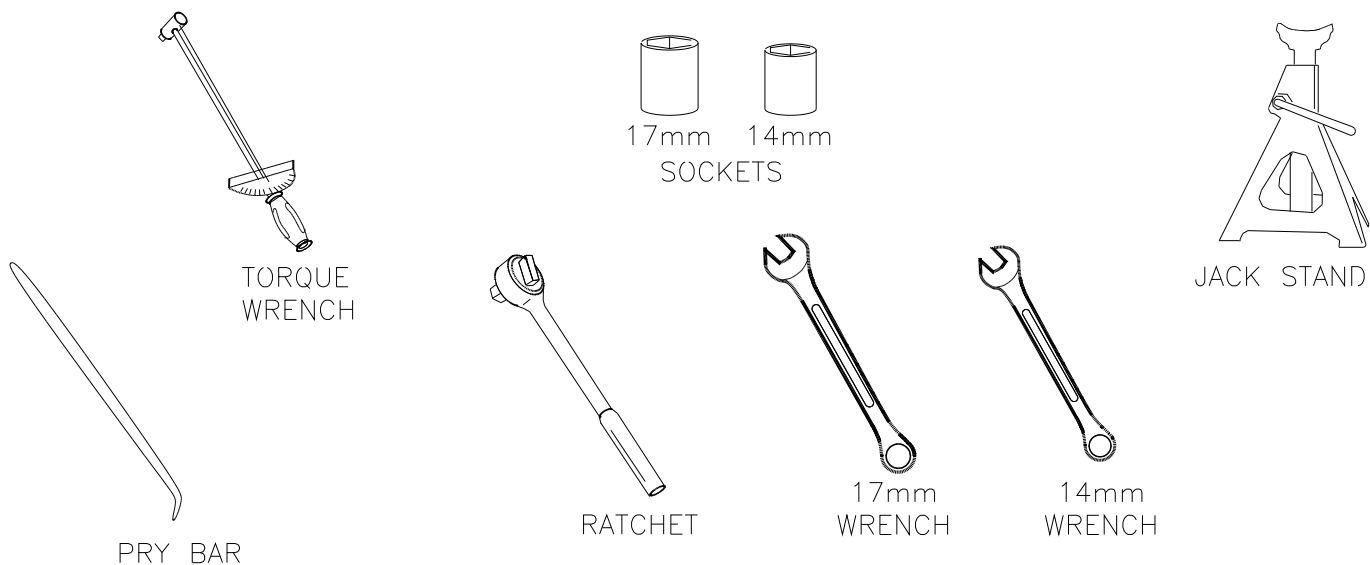




FORESTER AND 2002 IMPREZA ONLY

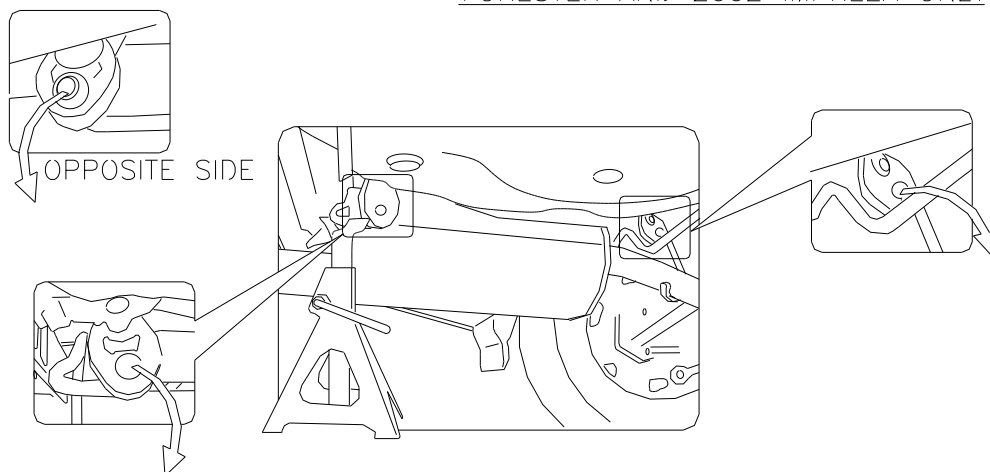

SUBARU

INSTALLATION
INSTRUCTIONS

DIFFERENTIAL PROTECTOR FOR LEGACY, FORESTER AND IMPREZA B031SSA000

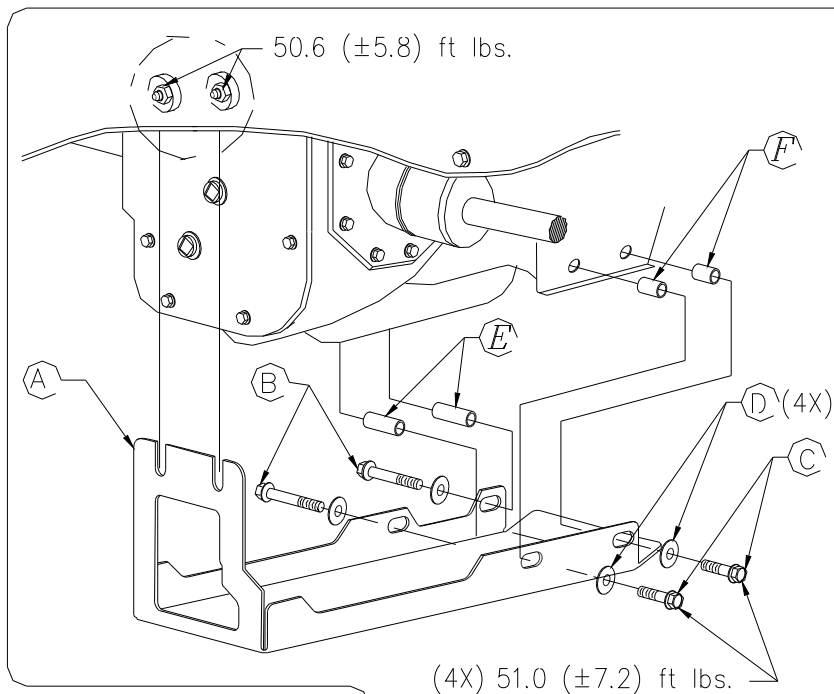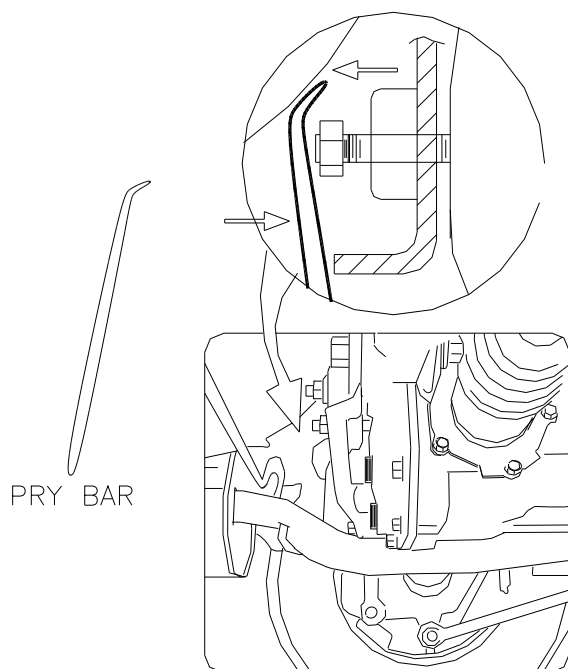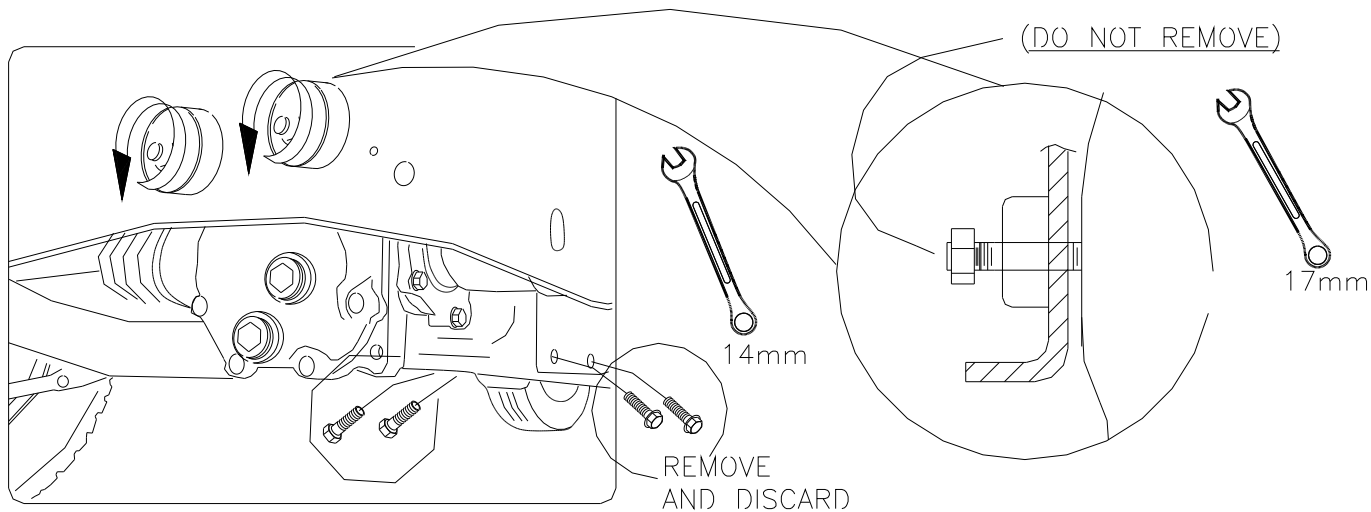

FORESTER AND 2002 IMPREZA ONLY

