

SUBARU**INSTALLATION
INSTRUCTIONS****FORESTER
HOOD PROTECTOR
E231SSA000****Kit Contents**

1 x Protector




4 x Long Self Tapping Screws



4 x Plastic Screwplugs



3 x Spare Bumpons (Clear)



8 x Small Anti-abrasion Tape Pads (yellow backing)



1 x Alcohol Wipe



2 x Outer Metal Brackets



2 x Inner Metal Brackets



2 x Large Anti-abrasion Tape



2 x Small Anti-abrasion Tape



2 x Outer Bracket Screwplugs




4 x Fibre Washers



2 x Outer Bracket Metal Washers



4 x Black Screws




4 x Plastic Nut Inserts













2 x Outer Bracket Self Tapping Screws













**Tools Required**

Phillips head screwdriver

**IMPORTANT NOTES**

- DO NOT USE SOLVENT BASED CLEANERS ON HOOD PROTECTOR.
- DO NOT USE LOCTITE ON PROTECTOR ATTACHING SCREWS.
- USE SOAP AND WATER ONLY TO CLEAN HOOD PROTECTOR.

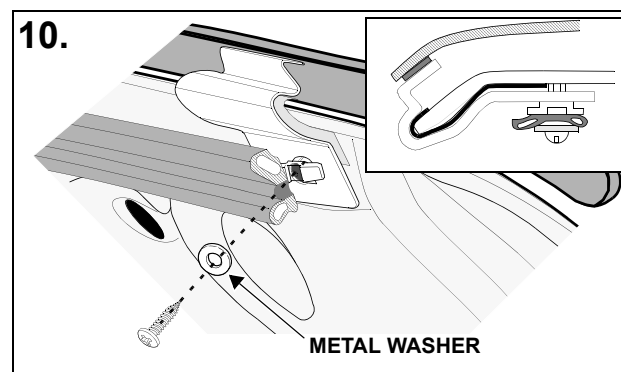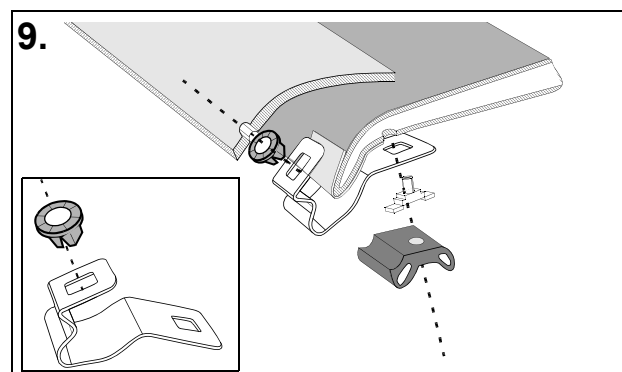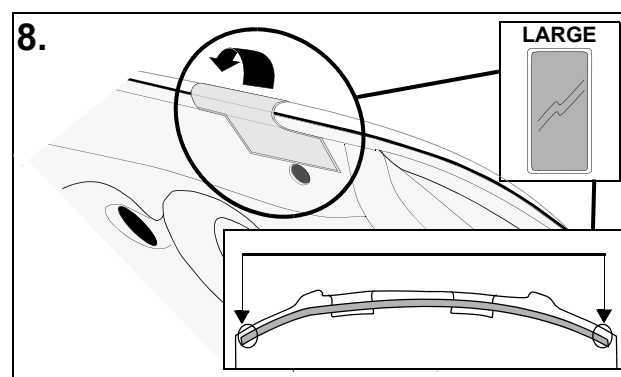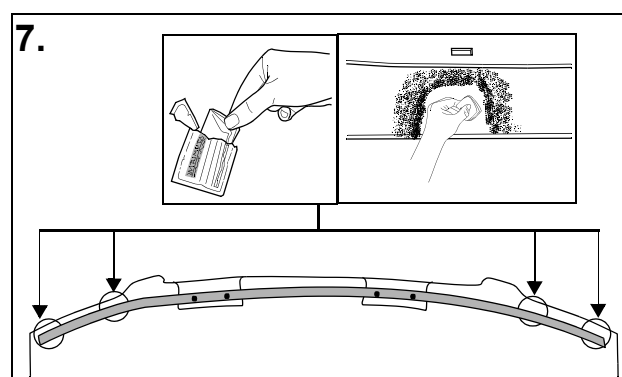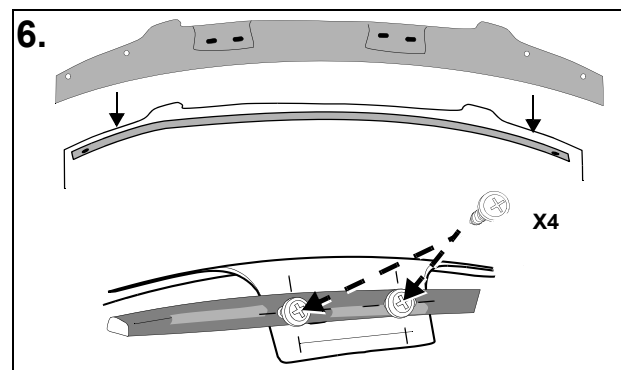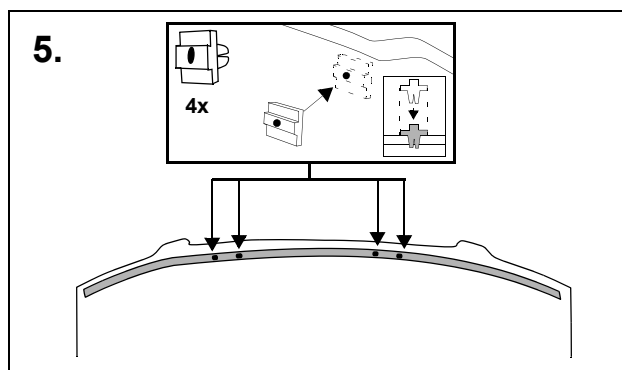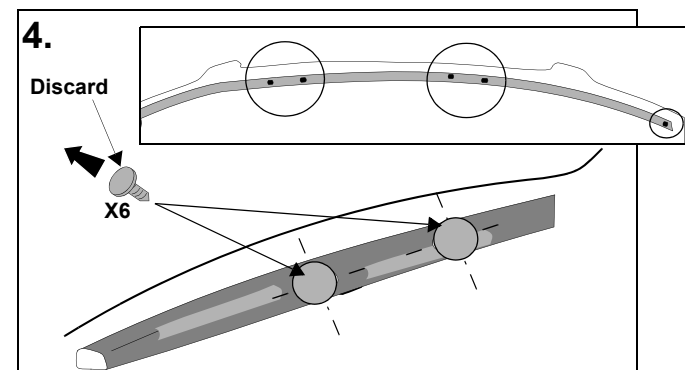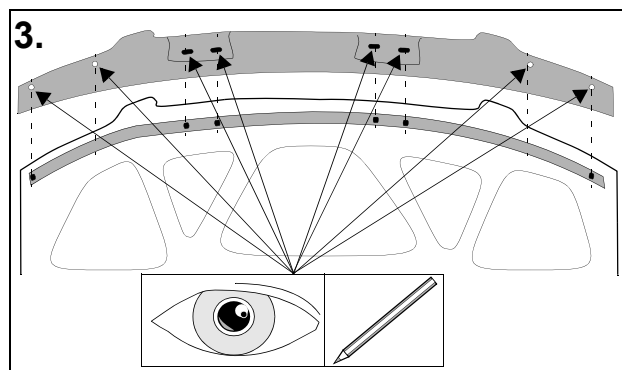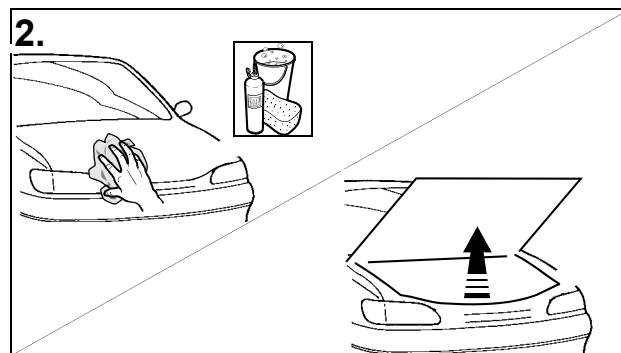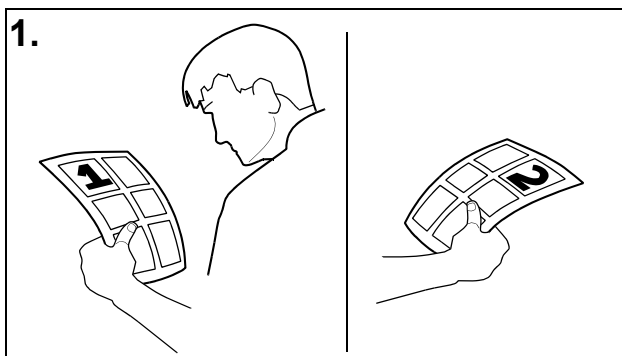

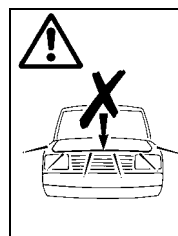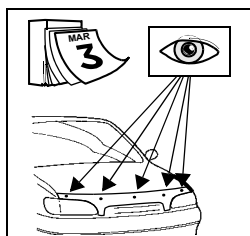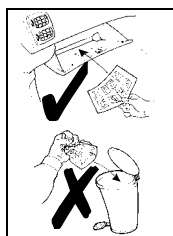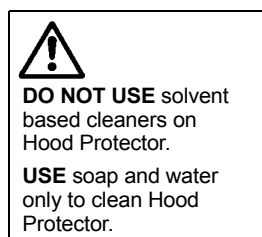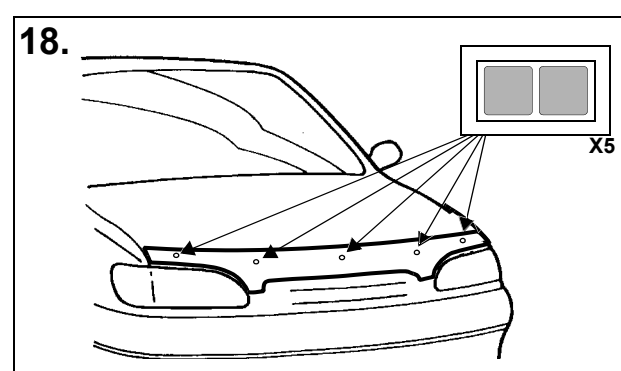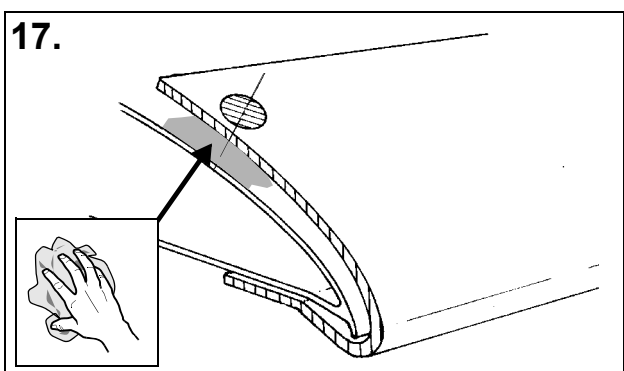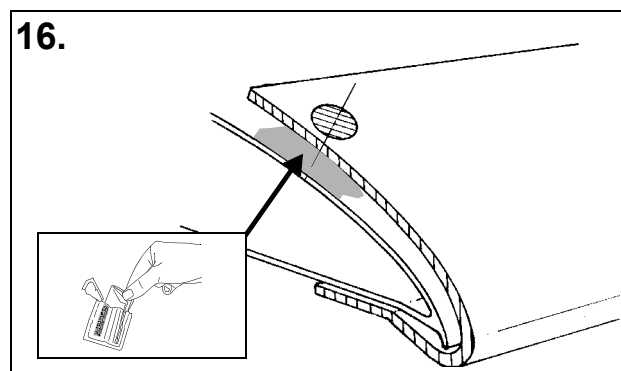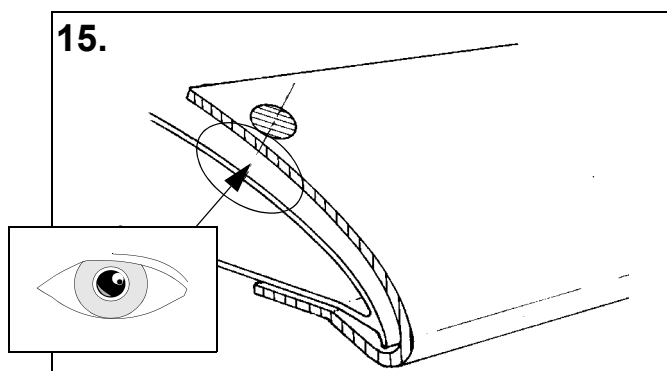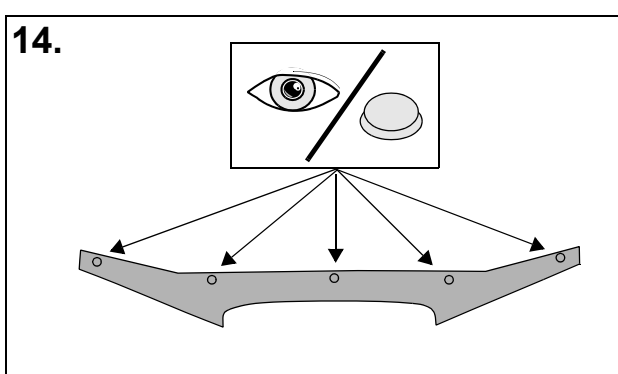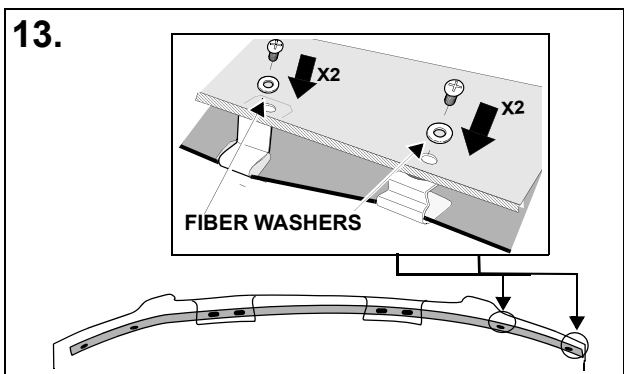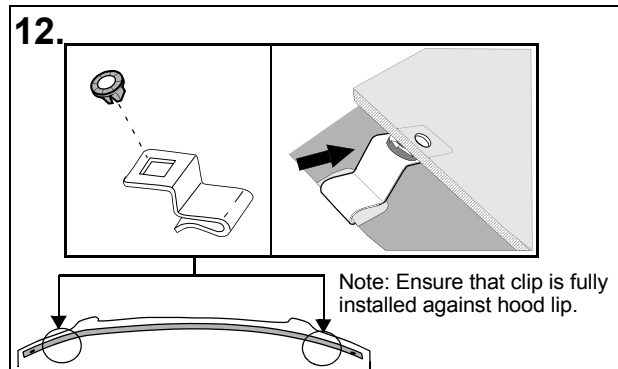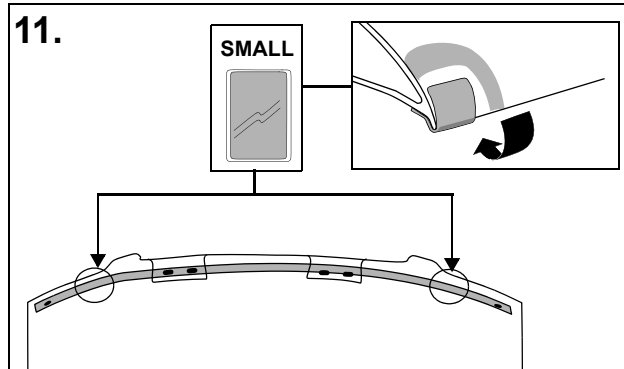

SUBARU**INSTALLATION
INSTRUCTIONS****FORESTER
HOOD PROTECTOR
INSTALLATION
ADDENDUM SHEET****IMPORTANT NOTES**

- If your vehicle is a 2003 Forester or a 2004 Forester with a VIN no higher than 706332 utilize all four screwplugs and screws supplied in the kit.
- If your vehicle is a 2004 Forester with the VIN 706334 or higher, utilize only two screwplugs and two screws in the locations indicated in the drawing and discard the two remaining screwplugs and screws.

