


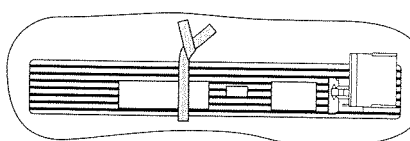
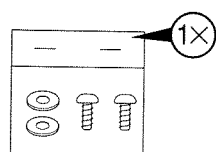
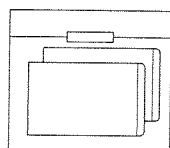
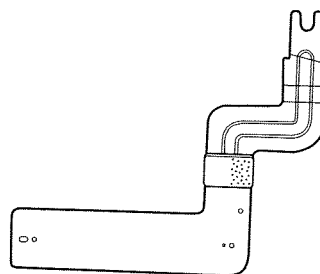
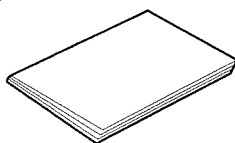
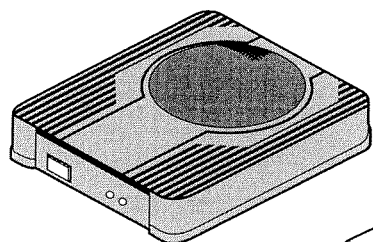
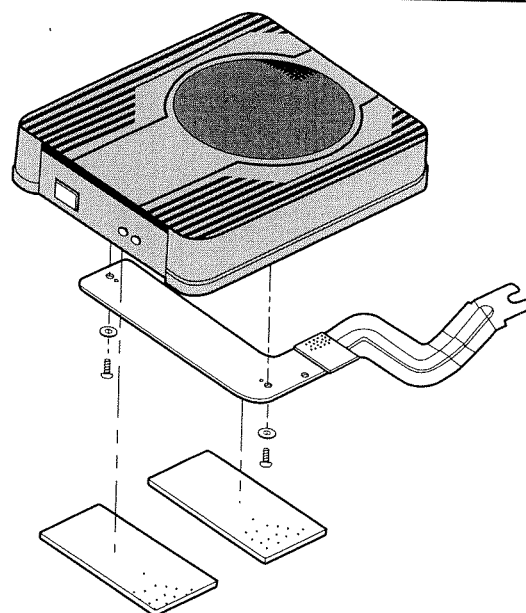



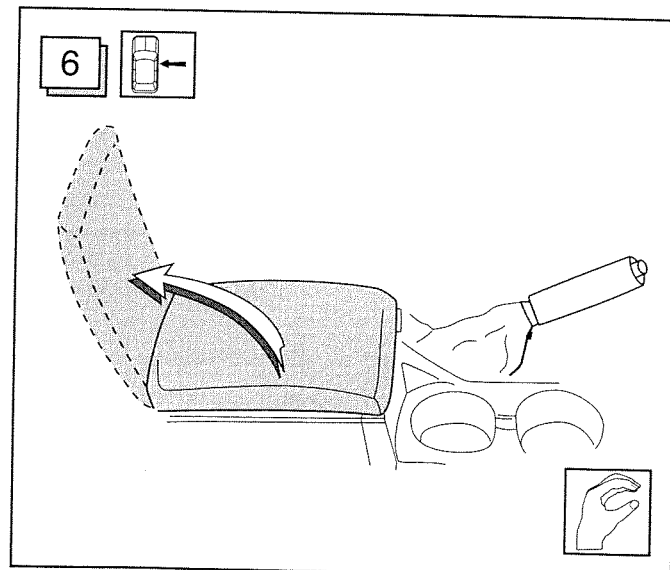
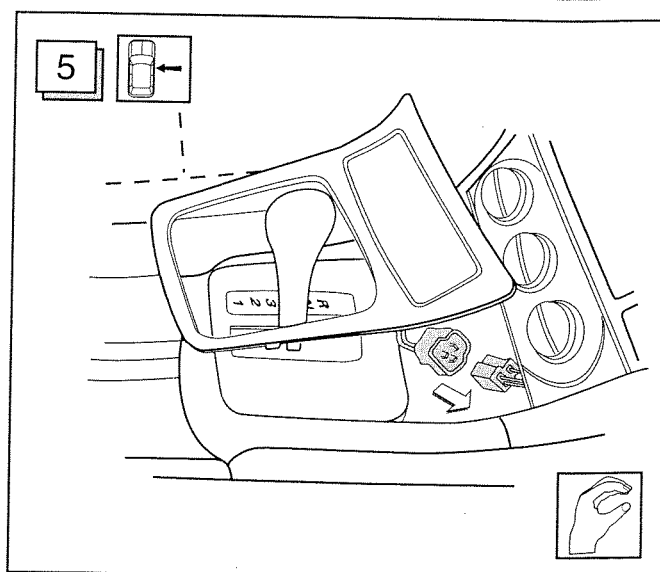
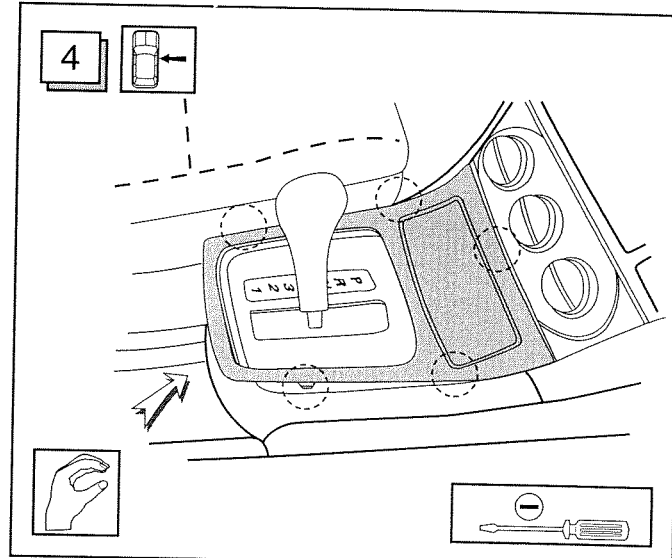
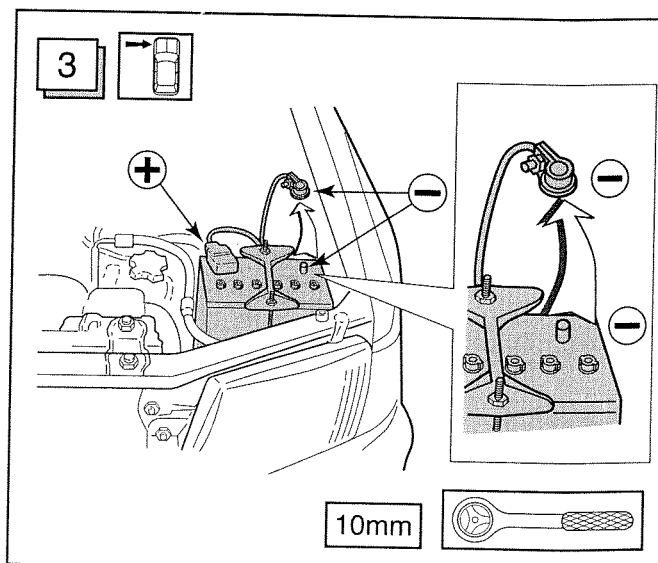








Installation Instruction for : SUB WOOFER


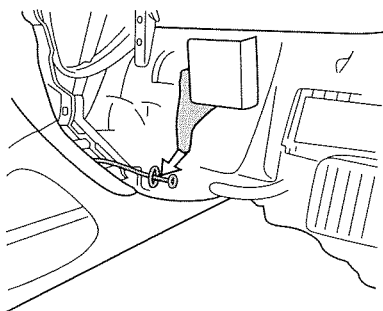
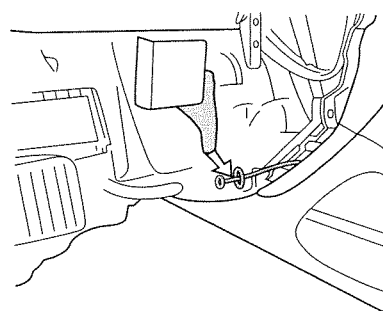
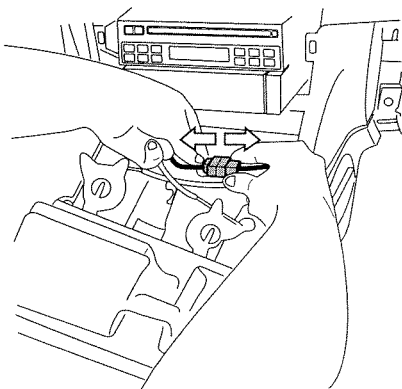
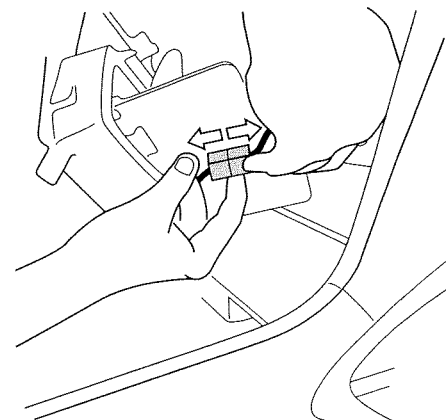
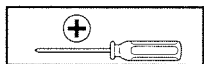
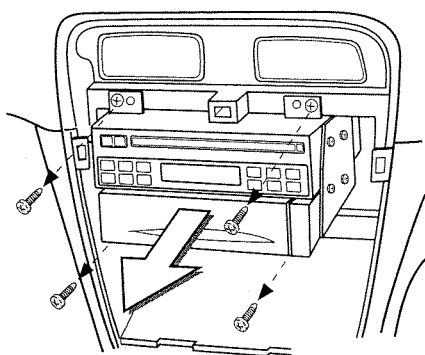
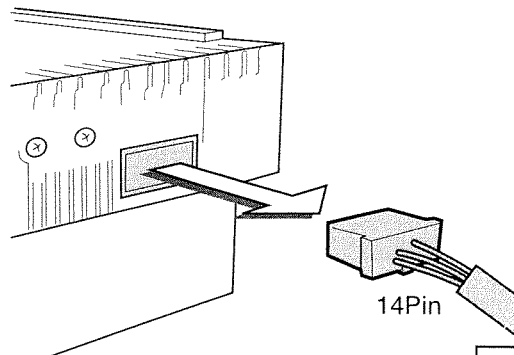
M4x8 (2x)





10mm & 14mm




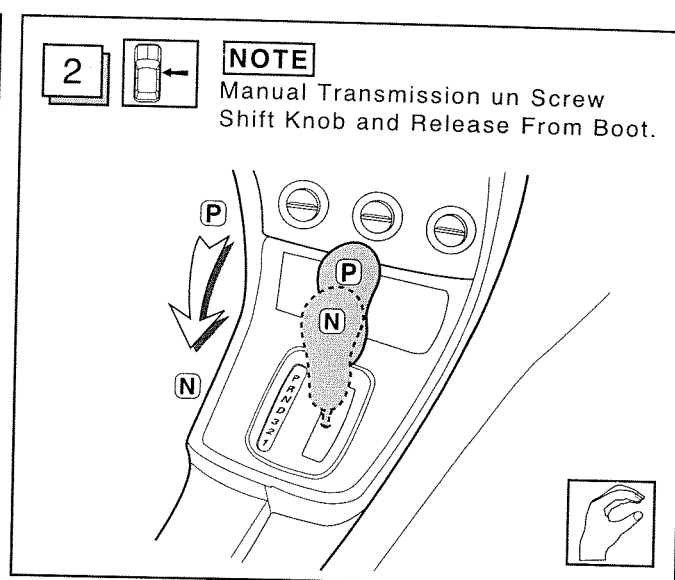







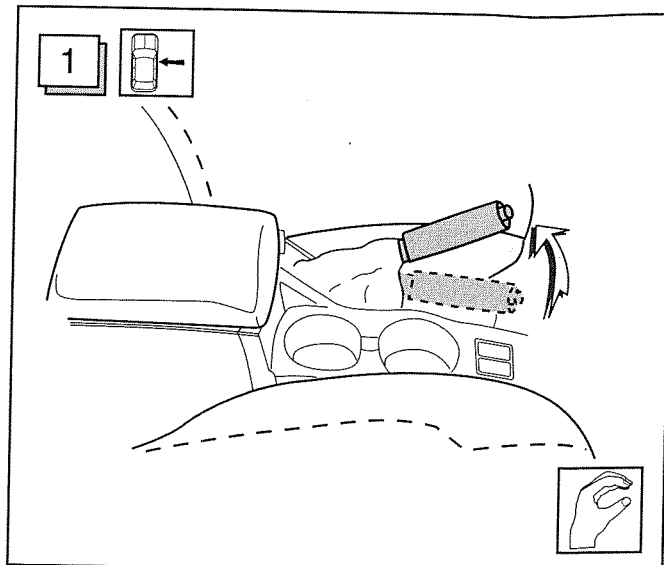


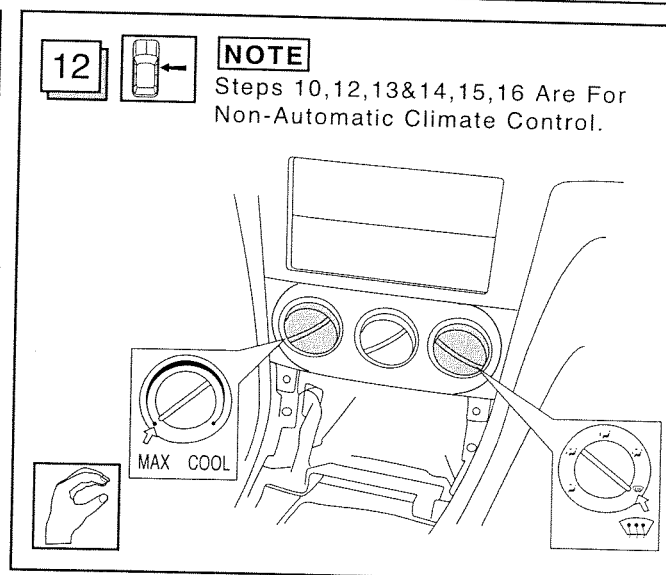
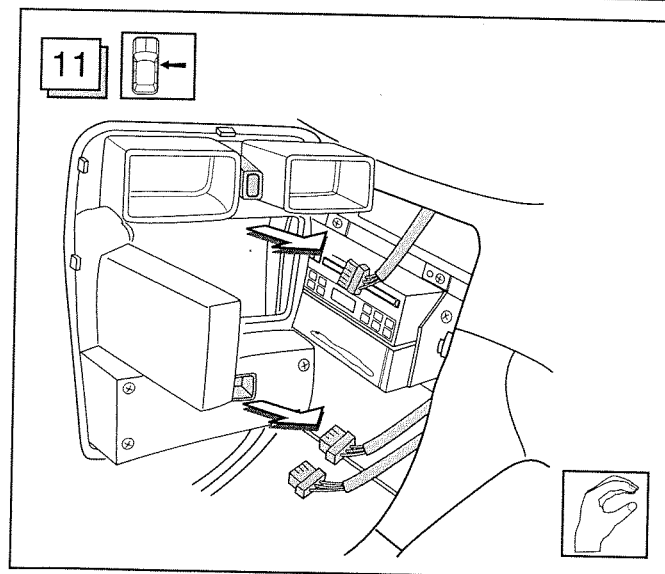
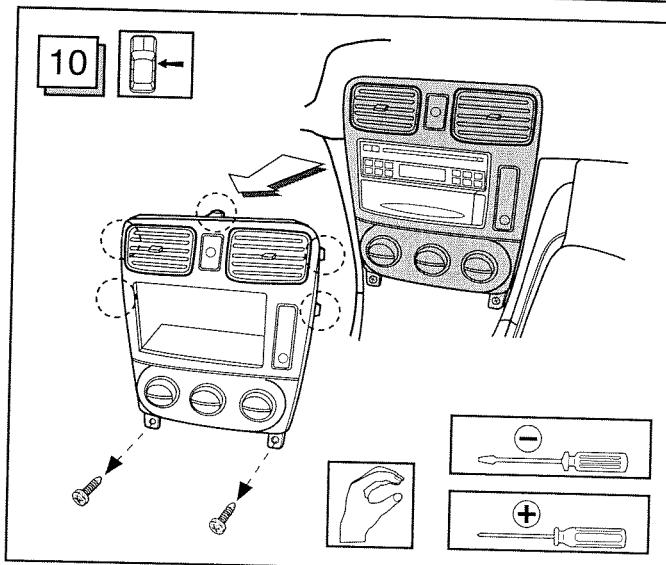
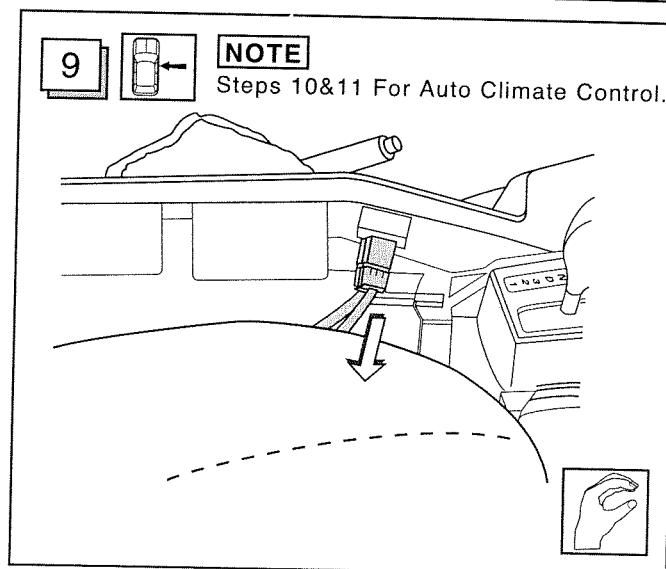
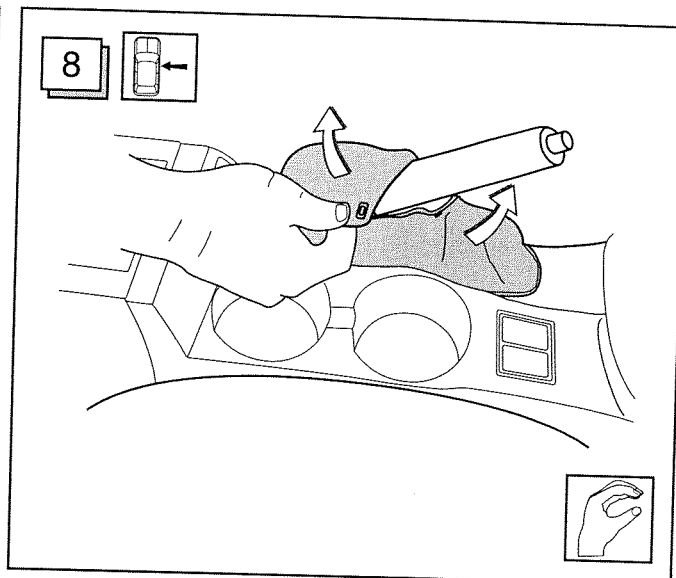
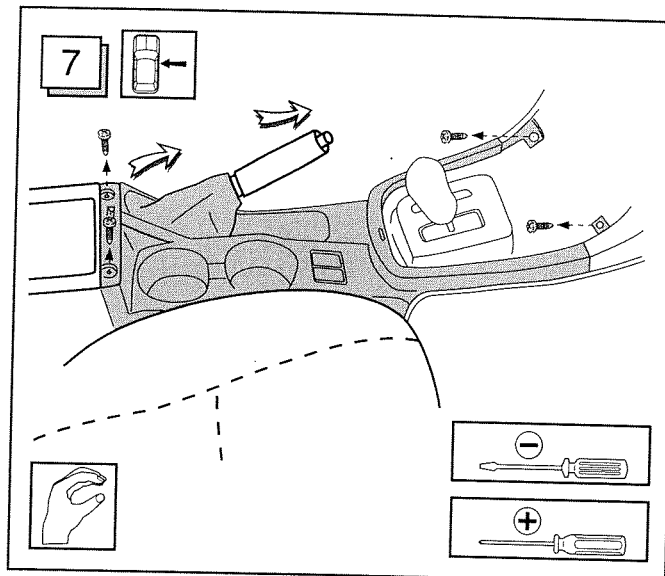








13

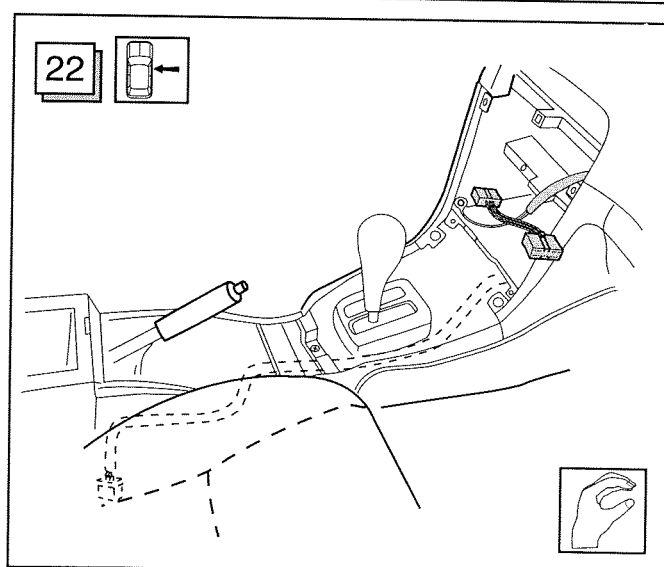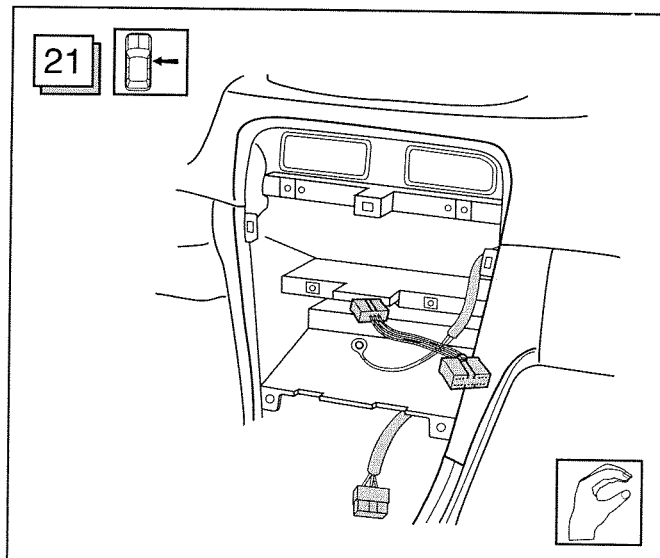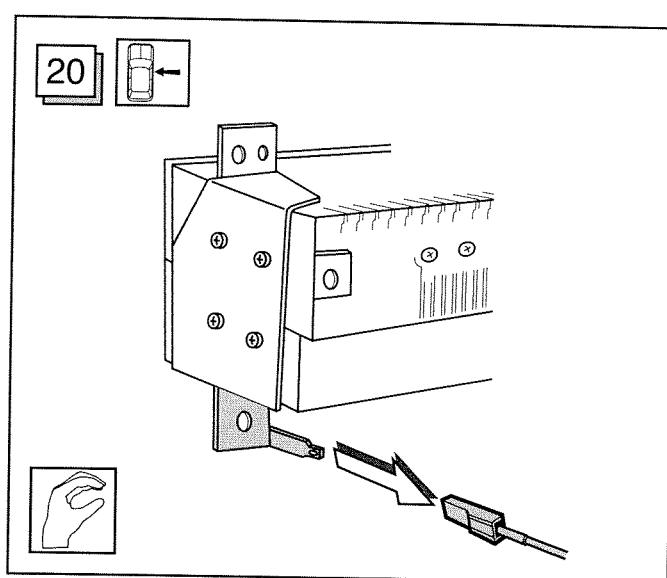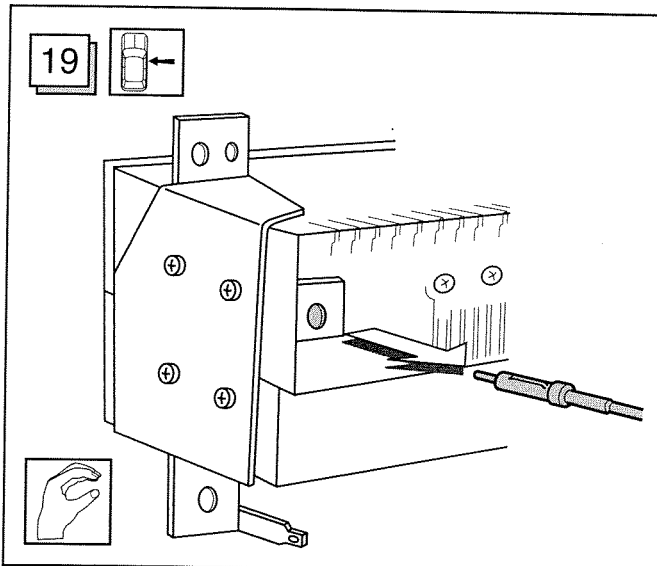14

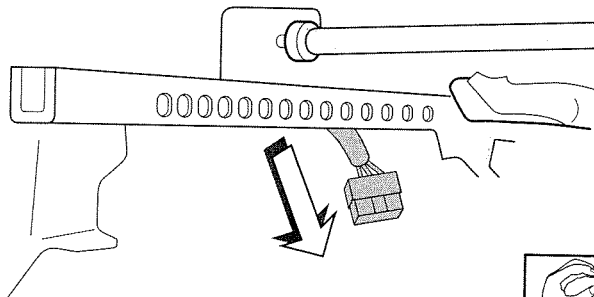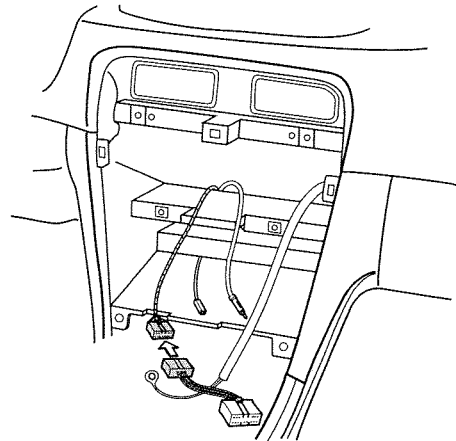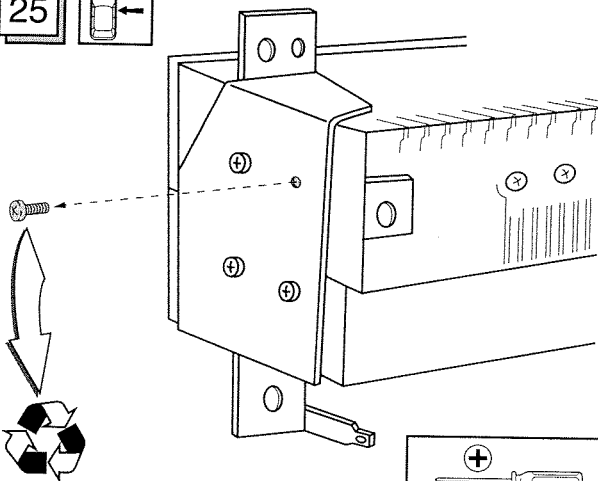15

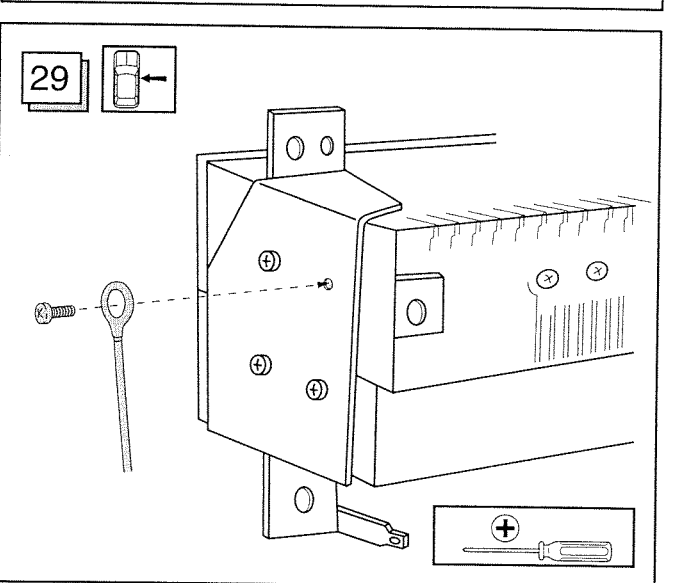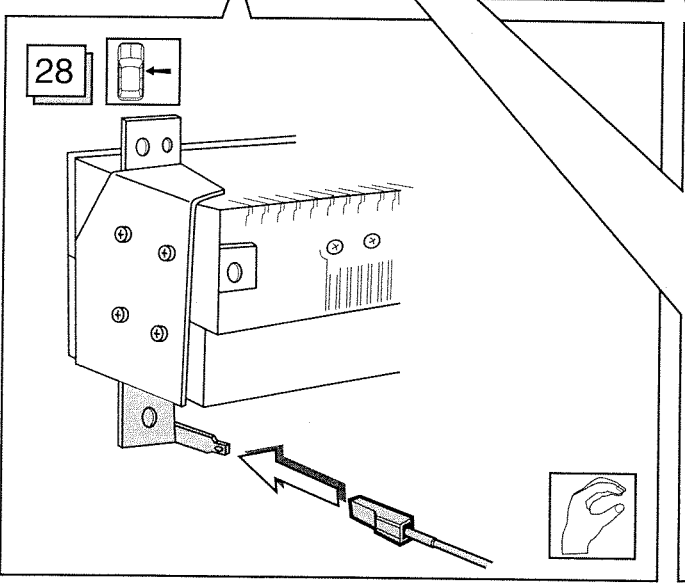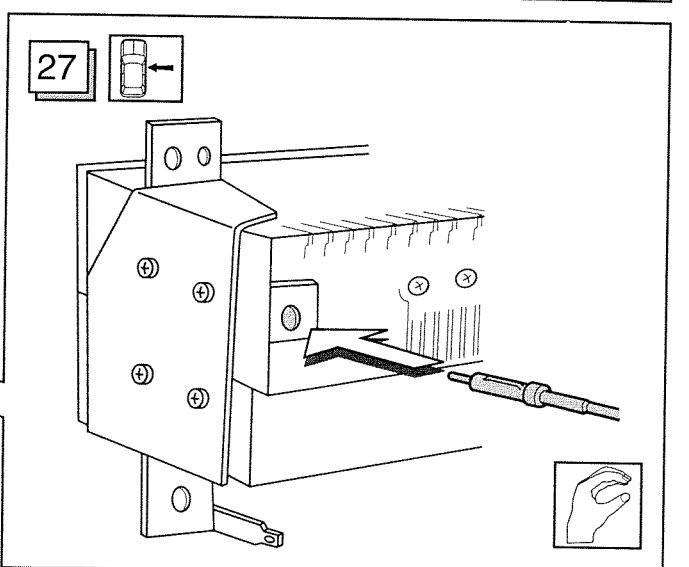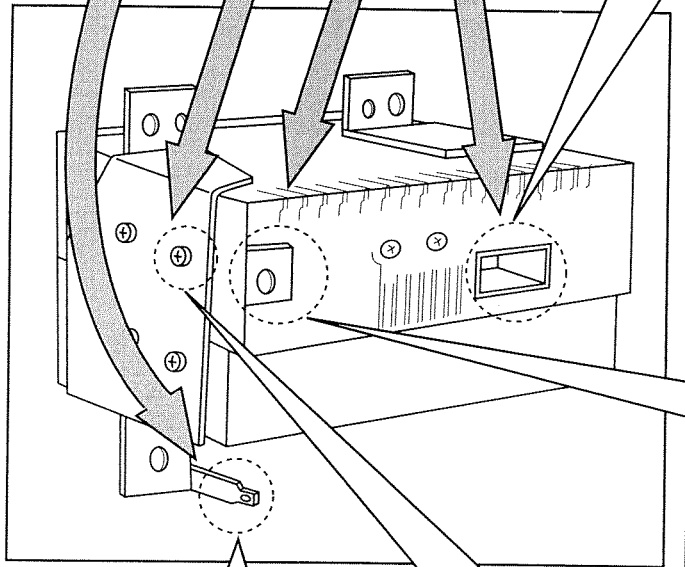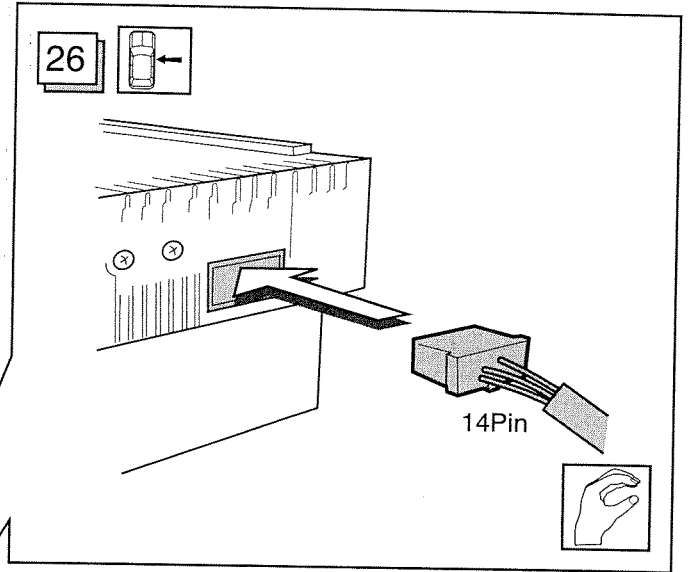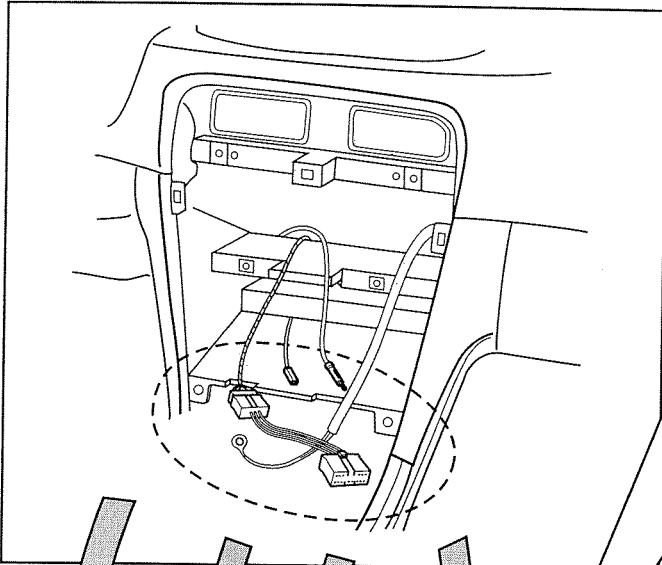16

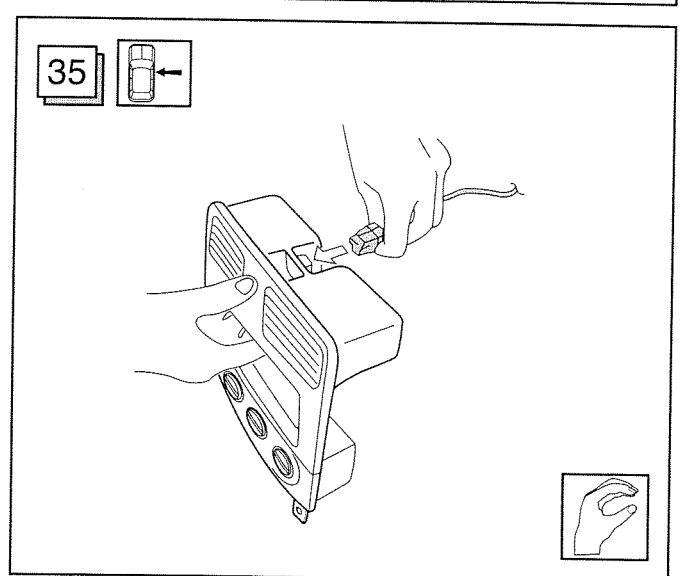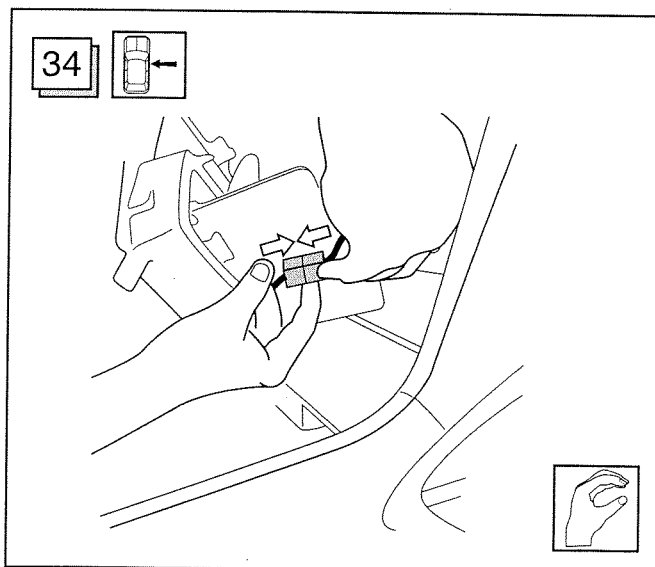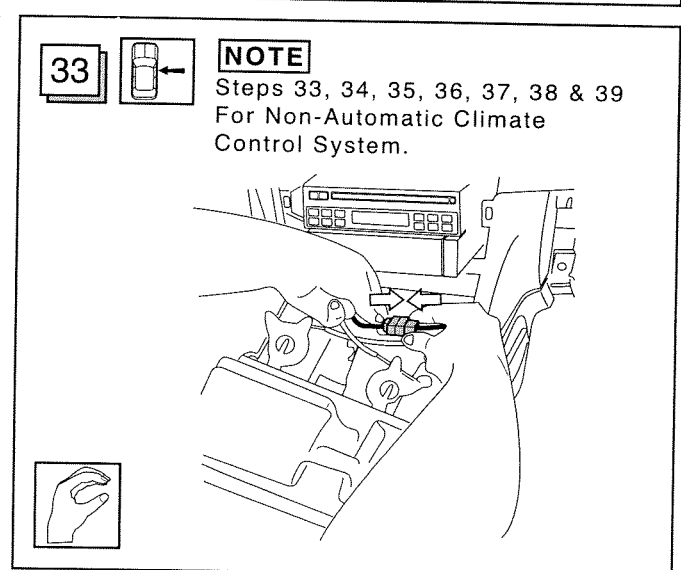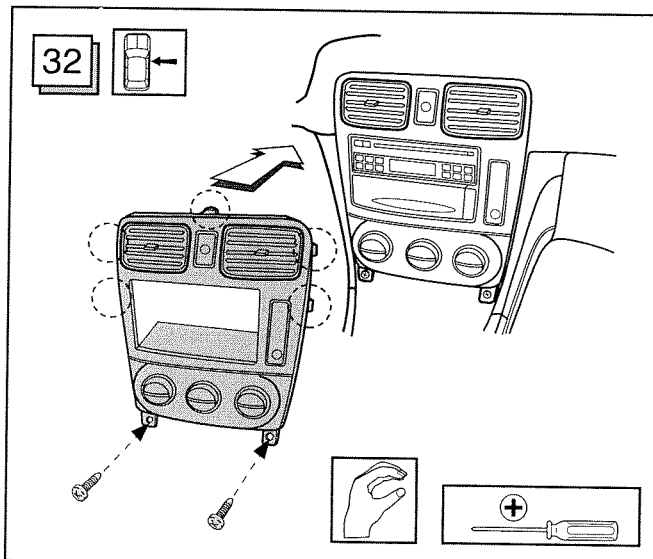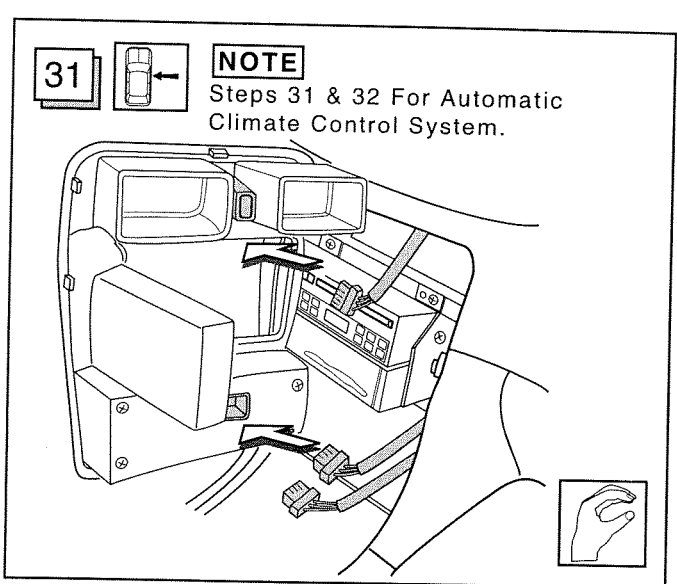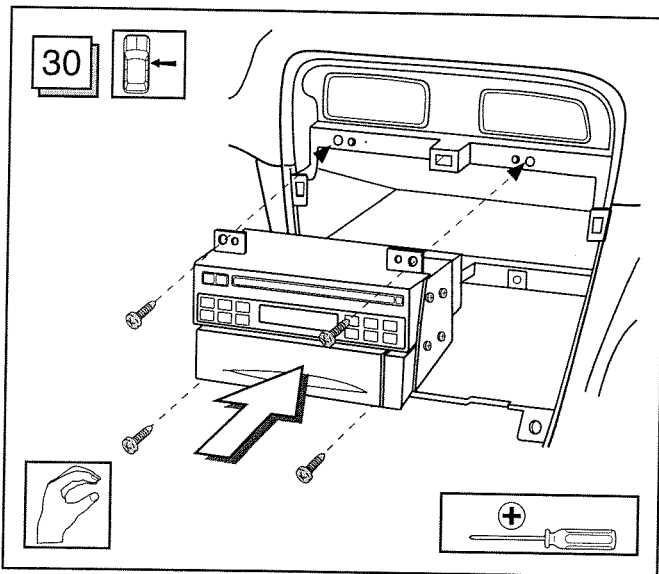17

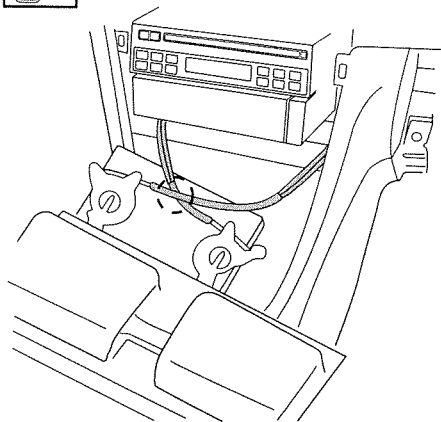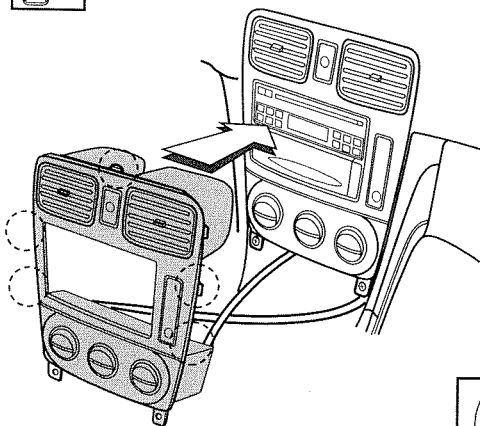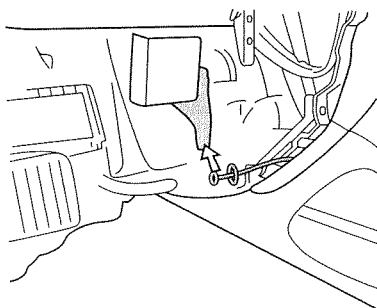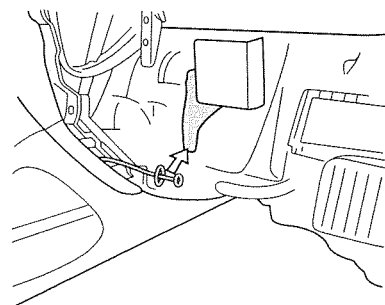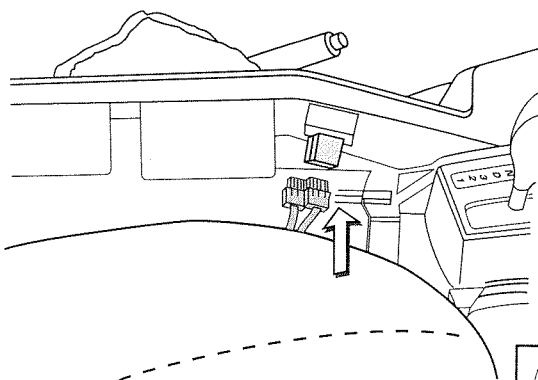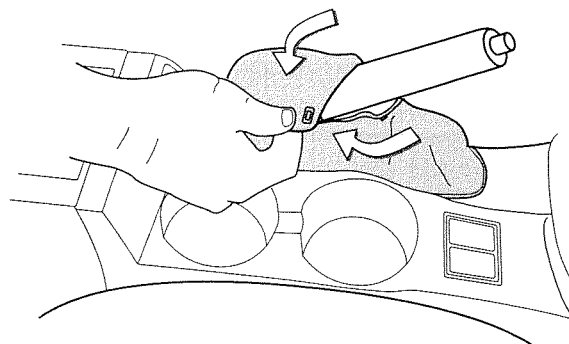18


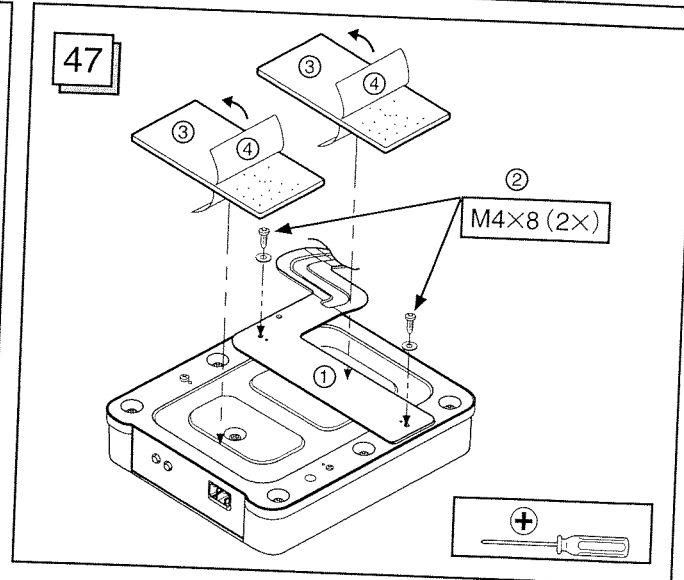
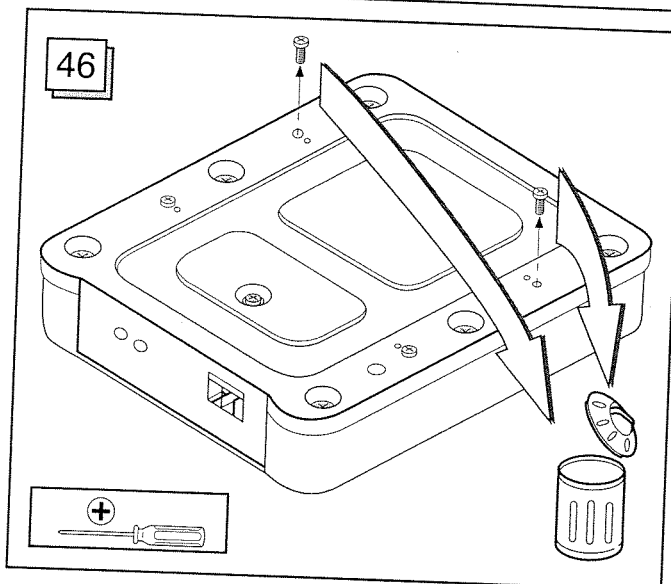
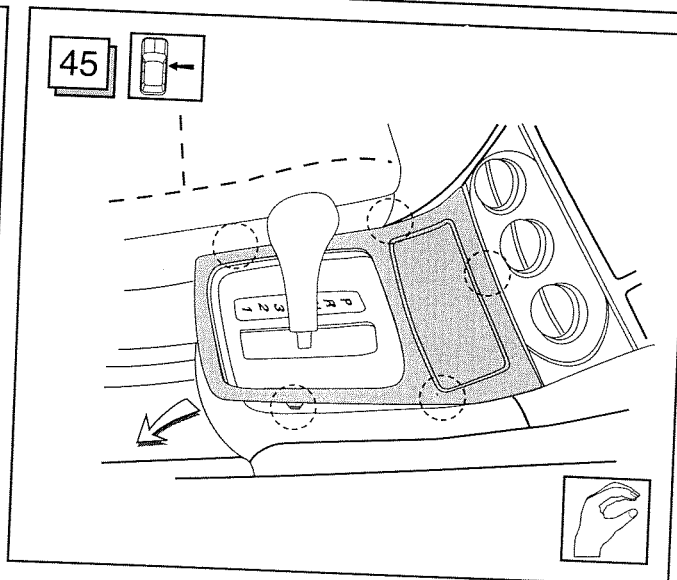
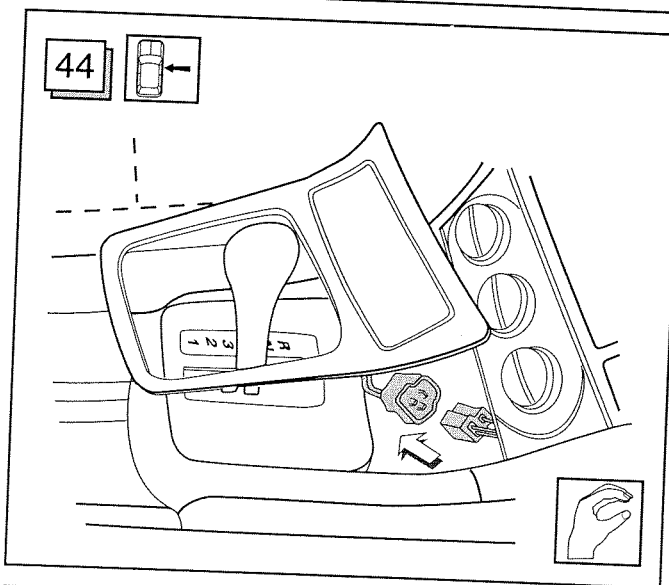
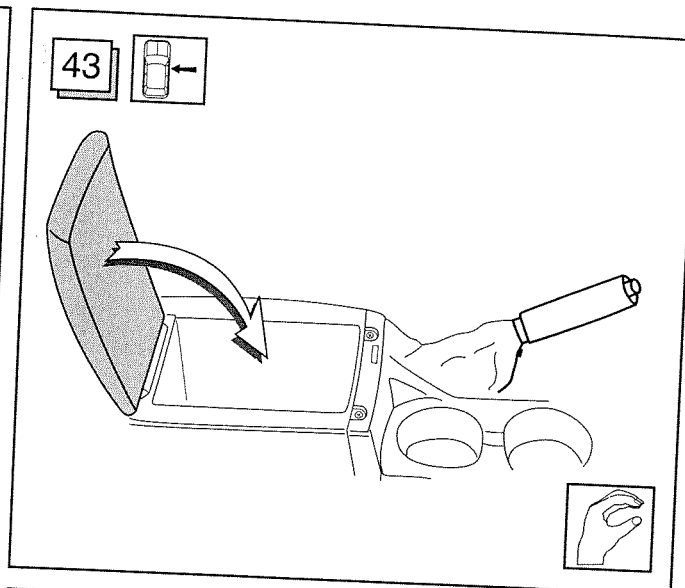
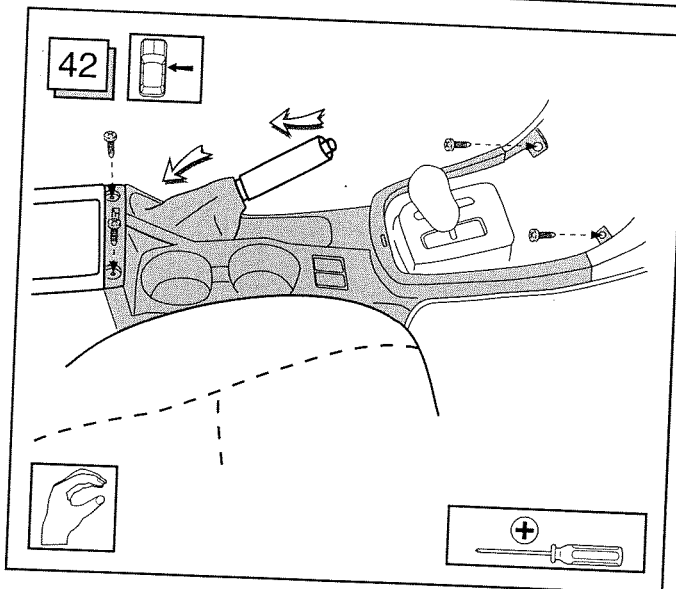








23

24

25


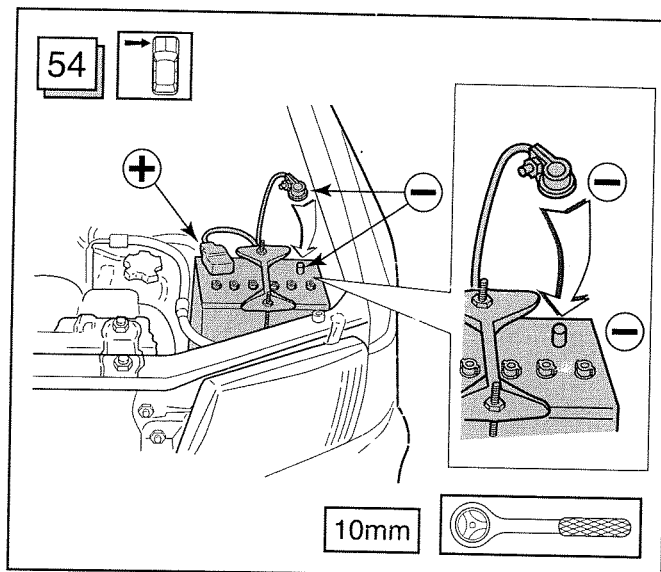


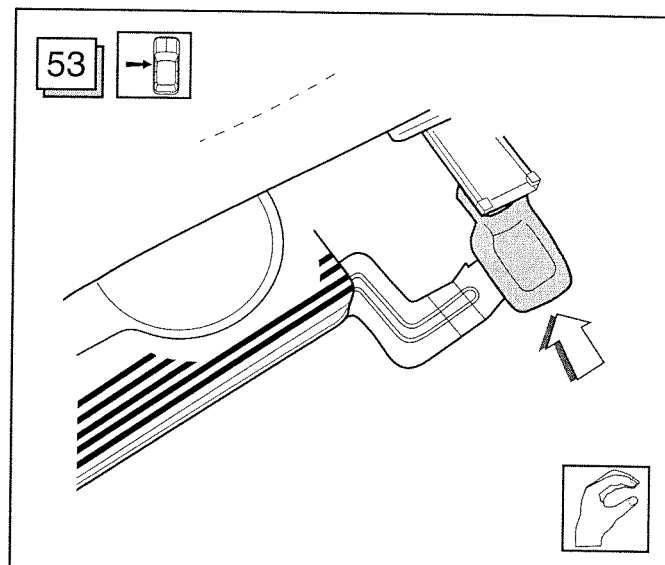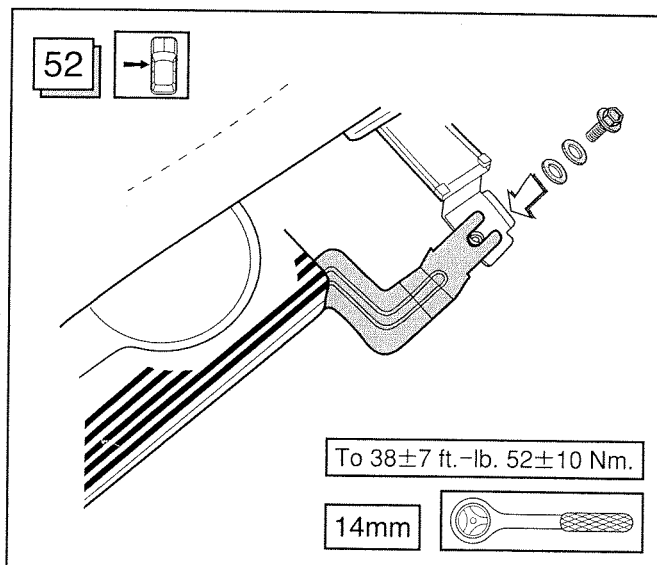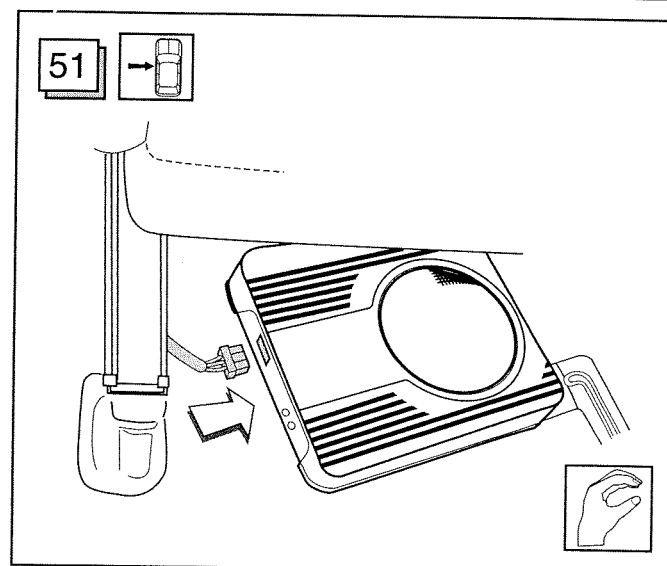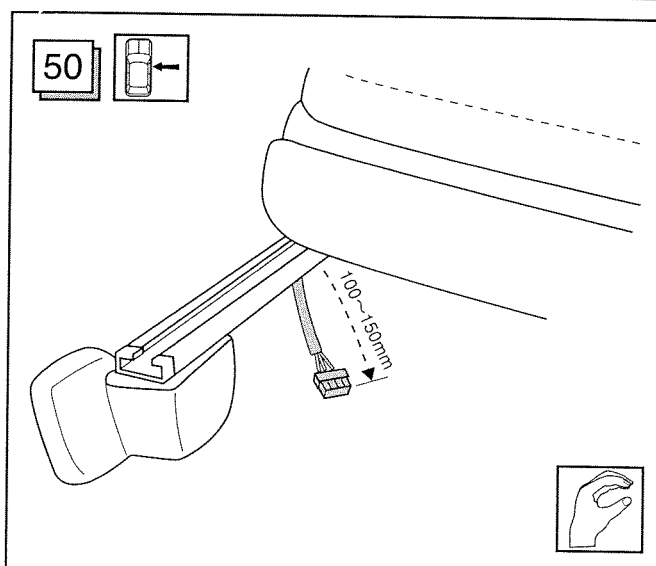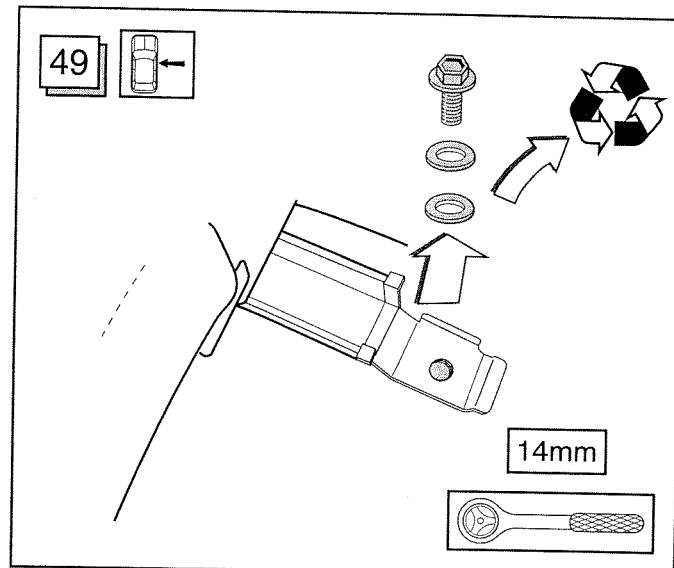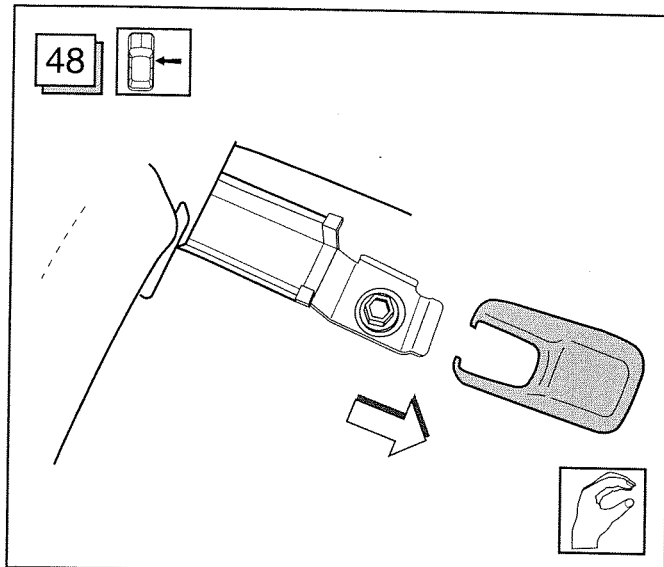

36

37

38

39

40

41








Part number
H630SSA200

Date
10/09/01

Subaru of America

Page
12/12

H630SSA200 Subwoofer Amplifier

1. Engage parking brake.
2. If automatic place vehicle in neutral. If manual un-screw shift knob from shifter and remove.
3. Disconnect negative battery terminal.
4. Using flat non-marring blade carefully pry up at location indicated with arrow the shifter bezel and remove.
5. Disconnect lighter connector by pinching detent on connectors.
6. Open center armrest.
7. Remove center console by removing four screws with a phillips screwdriver as shown. Do not discard screws.
8. Un-button the parking brake cover.
9. Disconnect connectors on center console by pinching detent on connectors.
10. Remove two screws using a phillips screwdriver as shown and carefully pry the trim on the vehicle.
11. Disconnect the Hazard connector (for Automatic and Non-Automatic Climate control) as shown and disconnect the lower connectors (for Automatic Climate control only).
12. Turn knobs in positions shown (for Non-Automatic Climate control only).
13. Disconnect passenger cable as shown by pulling it off the lever arm.
14. Disconnect driver cable as shown by pulling it off the lever arm.
15. Disconnect the connector for heater/air conditioning controls as shown. (for Non-Automatic Climate control only).
16. Disconnect the connector for heater/air conditioning controls as shown. (for Non-Automatic Climate control only).
17. Remove four phillips screws as shown, do not discard, and pull radio unit out.
18. Disconnect 14 pin connector.
19. Disconnect antenna wire.
20. Disconnect ground wire.
21. Install harness from kit as shown, towards right side of vehicle. Be sure harness does not get entrapped upon reinstallation.
22. Route harness as shown, be sure harness is away from seat track.
23. Fish harness down the under side of the right hand seat.
24. Connect the 14 pin connector from the kit harness to the vehicle harness as shown.
25. Remove screw as shown, do not discard.
26. Reconnect the 14 pin connector.
27. Reconnect the antenna wire.
28. Reconnect the ground wire, be sure ground wire is below the radio support.
29. Connect the ground wire from the subwoofer kit harness to the radio side bracket using the previously removed screw.
30. Reinstall the radio using the four previously removed screws.
31. Reconnect the Hazard connector (for Automatic Climate control) as shown and reconnect the lower connectors (for Automatic Climate control only).
32. Reinstall the trim by placing trim in place and carefully pushing it in place. Reinstall two screws as shown. (for Automatic Climate control only).
33. Reconnect the connector for heater/air conditioning controls as shown. (for Non-Automatic Climate control only).
34. Reconnect the connector for heater/air conditioning controls as shown. (for Non-Automatic Climate control only).
35. Reconnect the Hazard connector (for Non-Automatic Climate control) as shown.
36. Insert the cables into the dash, note cables will be crossed. (for Non-Automatic Climate control only).
37. Reinstall the trim by placing trim in place and carefully pushing it in place, be sure cables are not bound, but move freely towards the lever arms. (for Non-Automatic Climate control only).
38. Reconnect driver cable as shown by pushing it on the lever arm.
39. Reconnect passenger cable as shown by pushing it on the lever arm.
40. Reconnect harness as shown.
41. Button cover as shown.
42. Reinstall center console using four screws as shown.
43. Close armrest.
44. Reconnect lighter harness.
45. Reinstall the shifter bezel trim (and shift knob, if manual).
46. Remove two screws on back side of subwoofer, carefully note the location of the screw holes on the subwoofer.
47. Place bracket on the subwoofer (1) as shown install using two washers and machine screws (2) from kit. Take foam from kit (3) and peel back safety paper (4), place foam on the underside of the subwoofer as shown.
48. Remove cover on the passenger side seat mounting bolt located under the seat.
49. Loosen the 14 mm bolt securing the seat rail. Note the sequence of all washers.
50. Fish the appropriate harness length under the seat.
51. Connect to the subwoofer.
52. Attach the subwoofer with bracket on top of the seat bracket and reinstall the bolt and torque to the specified torque shown. Note the sequence of all washers.
53. Reinstall the cover.
54. Reconnect the negative battery terminal.