
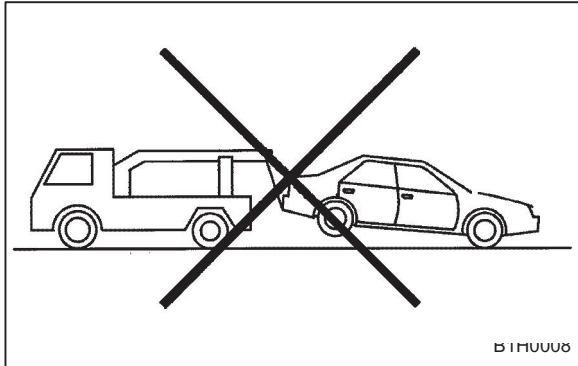


1-3 [G1F1]**1. General Precautions****GENERAL INFORMATION**


- Do not tow vehicle with rear wheels raised under any circumstances since this will damage bumper.

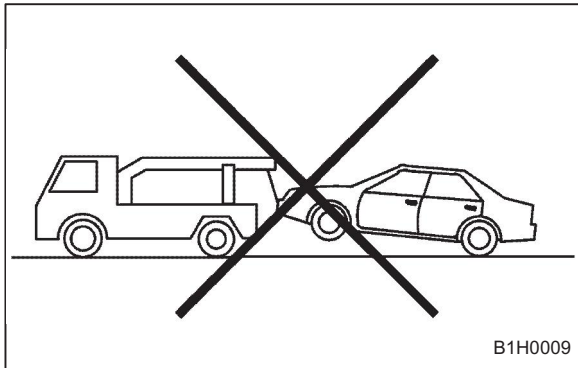

- Do not tow vehicle with front wheels raised under any circumstances since this will damage bumper.

**CAUTION:**

Be sure to turn off the engine before fitting the spare fuse in the FWD connector.

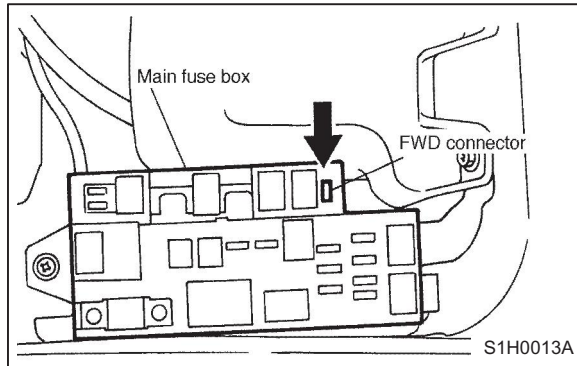
**2. TOWING****NOTE:**

On vehicles with security system, avoid locking the doors using "LOCK/ARM" button on the transmitter or the power door lock switch. Doing so brings the security system into the arming state, possibly causing the alarm to function.

- 1) Loading vehicle onto dolly or flat-bed truck

CAUTION:

- Transport vehicle using a dolly or flat-bed truck whenever possible.
- Place the selector lever in "P" position and apply the parking brake.

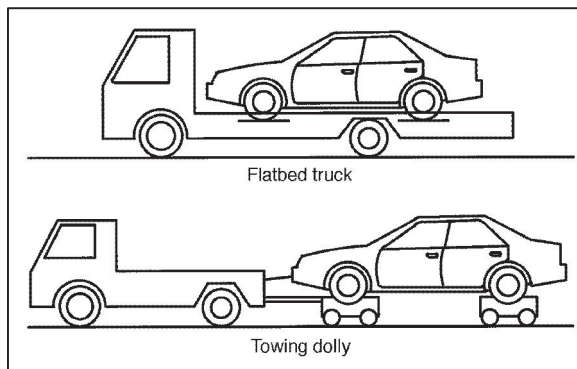**F: FULL TIME AWD AT MODELS**

1. BEFORE CHECKING OR SERVICING VEHICLES WITH THE FRONT WHEELS RAISED OR ON ROLLERS (BRAKE TESTER, CHASSIS DYNAMOMETER, ETC.)

CAUTION:

Ensure that the FWD pilot light is on. If the vehicle is left in the AWD mode, it will surge abruptly when the wheels turn, possibly damaging the transfer clutch.

Always set the vehicle in the FWD mode.

To set the vehicle in the FWD mode, disconnect the AWD circuit by inserting a fuse in the FWD connector inside the main fuse box. Also chock the rear wheels firmly.